SOUTHERN PACIFIC COMPANY

(PACIFIC SYSTEM.)

118

TIME TABLE

FOR THE

SACRAMENTO DIVISION

SOUTHERN
SAFETY
PACIFIC

SOUTHERN
SAFETY
PACIFIC

To Take Effect Sunday, January 28, 1923, at 12:01 A. M.

PACIFIC STANDARD TIME (120th MERIDIAN)

For the government and information of employes only, and not intended for the use of the public.

J. H. DYER,
General Manager.

F. L. BURCKHALTER
Assistant General Manager.

G. F. RICHARDSON,
Superintendent of Transportation.

R. L. RUBY,
Assistant Superintendent of Transportation.

EASTWARD

Time Table No. 118

January 28, 1923.

Capacity of siding in car lengths	THIRD CLASS						FIRST CLASS										Distance from San Francisco	STATIONS
	230	254	256	222	308	306	6	20	22	58	34	2	14	24	10	16		
	Nevada Mdse.	Ogden Manifest	Sunset Manifest	Portland Fast Freight	Local Freight	Local Freight	Nevada Express	Pacific Limited	St. Louis Express	Sacramento Chico Passenger	Sacramento Colfax Passenger	San Francisco Overland Limited	Portland Express	Tonopah Express	Atlantic Express	Oregon Express		
	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Lv. Mon. Wed. & Fri.	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily		
Term Yard BKWFTYP	7.15PM			8.40AM			10.15PM	9.35PM	4.40PM	4.35PM	3.45PM	2.35PM	1.10PM	7.30AM	1.30AM	12.30AM	88.8	TO-R **SACRAMENTO** 3.0
Yard IY P		11.00AM	8.50AM	8.55			10.27	9.47	4.52	4.47	f3.57	2.47	1.22	7.42	1.42	12.42	91.8	**ELVAS** 1.5
W																	93.3	SWANSTON 1.6
88 P							10.32	9.52	4.57	4.52	f4.02	2.52	1.27	f 7.47	1.47	12.47	94.9	BENALI 4.5
10 Spur P											f			f			99.4	WALERGA 3.4
60 P							10.42	10.02	5.07	5.02	s4.12	3.02	1.37	f 7.59	1.57	12.57	102.8	ANTELOPE 3.0
Term Yard BKTWFPY	8.00PM	12.05PM 2.30	10.00AM	10.15AM		4.00AM											105.8	TO-R ROSEVILLE YARD 0.8
							s10.55	s10.15	s 5.20	s 5.10PM	s4.20	s 3.15	s1.47PM	s 8.10	s 2.10	s 1.05AM	106.6	**ROSEVILLE** 1.3
																	107.9	ENWOOD 2.7
Yard P						4.15	f11.05	10.24	5.30		s4.30	3.24		s 8.20	s 2.20		110.6	TO ROCKLIN 4.9
73						See Page 3.	f11.17	10.35	5.42		See page 3.	3.35		See page 3.	2.33		115.5	LINCOLN AV.,PENRYN 4.7
87 WP		3.46				6.50	s11.33	10.46	s 5.55		s5.00	3.46		s 8.55	s 2.50		120.2	TO NEWCASTLE 4.0
86 WP						7.50	s11.47	10.56	f 6.10		s5.13	3.56		s 9.07	s 3.05		124.2	AUBURN, NEVADA ST. 4.9
76 P						8.20	11.58PM	11.06	6.22		f5.23	4.06		f 9.18	3.17		129.1	BOWMAN 2.3
70 P		5.32				8.50	12.04AM	11.11	6.27		f5.32	4.11		f 9.25	3.23		131.4	CLIPPER GAP 2.9
83 PW						9.05	12.10	11.17	6.33		s5.40	4.17		f 9.33	3.31		134.3	EAST APPLEGATE 3.4
82 P						9.40	12.18	11.24	6.40		s5.48	4.24		f 9.40	3.40		137.7	N. E. MILLS 1.3
											f						139.0	LANDER 2.7
Yard YPWBK		7.00			7.00AM	10.30AM	s12.35	s11.40	s 7.00		s6.00PM	s 4.40		s10.00	s 4.05		141.7 142.1	TO **COLFAX** 4.3
50 P		7.30			7.20		12.50	11.54PM	7.15			4.53		f10.17	4.20		146.4	CAPE HORN 2.5
														f			148.9	MAGRA 3.7
80 PWFY					8.15		1.15	12.10AM	7.33			5.08		s10.35	s 4.45		152.6	TO GOLD RUN 1.9
6 PSpur					8.40		1.20	12.14	f 7.38					f	s 4.53		154.5	DUTCH FLAT 1.9
4 PSpur									f					s			156.4	ALTA 0.8
5 Spur PW					9.00		1.31	12.22	7.48			5.18		f10.53	s 5.05		157.2	TO TOWLE 1.8
5 PSpur					9.15		1.37	12.27	7.53			5.22		f	5.12		159.0	GORGE 1.0
												s		s			160.0	AMERICAN 1.1
80 P					9.30		1.45	12.34	8.03			5.34		f11.10	5.20		161.1	MIDAS 2.3
10 Spur PW					9.50		1.52	12.40	8.12			5.40		f11.18	5.28		163.4	FOREBAY 2.1
		9.50			10.00		2.00	12.47	8.20			5.47		11.25	5.36		165.5	B. C. JUNCTION 0.4
68 PTWBK		10.00PM			10.10AM		s 2.03AM	s12.50AM	s 8.23PM			s 5.50PM		¶ 11.30AM	s 5.40AM		165.9	TO-R **BLUE CANON**
	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily	Ar. Mon. Wed. & Fri.	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily		(76.7)
	(0.45)	(8.35)	(1.10)	(1.35)	(3.10)	(6.30)	(3.48)	(3.15)	(3.43)	(0.35)	(2.15)	(3.15)	(0.37)	(4.00)	(4.10)	(0.35)		................Time over District
	25.80	9.10	9.20	10.95	7.64	5.69	20.28	22.60	20.74	30.51	23.51	22.60	28.86	19.17	18.40	30.51		................Average speed per hour

Block Signals

No. 2 Track

Staff Sys.

No. 4 Track between Rocklin and Loomis will be used exclusively by Nos. 24, 34 and 306; by other trains only when authorized by train order.

Eastward trains to use siding at Clipper Gap, back in through cross-over near east end of siding.

Eastward trains authorized to use No. 1 Track between Loomis and Newcastle may proceed on No. 1 Track to the first cross-over switch located east of the station building at Newcastle.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS

Train	At	Receive or Discharge	Passengers to (or beyond)	Passengers from (or beyond)
34	Haggin mp. 94.1	Receive or Discharge	Any Station	Any Station
2, 20	Any Station	Receive	Cheyenne	
10, 22	Any Station	Receive	Ogden	

EASTWARD				Time Table No. 118 January 28, 1923		Distance from Blue Canon	WESTWARD FIRST CLASS										THIRD CLASS						Capacity of Sidings in Car Lengths
306	24	34					5	13	19	21	9	33	1	57	23	15	253	305	219	229	257	307	
Local Freight	Tonopah Express	Sacramento Colfax Passenger					Nevada Express	San Francisco Express	Pacific Limited	St. Louis Express	Fast Mail	Colfax Sacramento Passenger	San Francisco Overland Limited	Chico Sacramento Passenger	Sparks San Francisco Passenger	California Express	Ogden Manifest	Local Freight	Freight	Local Freight	Sunset Manifest	Local Freight	
Lv. Daily Ex. Sunday	Leave Daily	Leave Daily		STATIONS			Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Ar. Daily Ex. Sunday	Ar. Daily	Ar. Daily Ex. Sunday	Arrive Daily	Ar. Tues., Thur. & Sat.	
			Block Signals	TO-R **SACRAMENTO** 3.0	No. 1 Track	77.1	s 3.50AM	s 4.10AM	s 4.50AM	s 6.45AM	s 8.55AM	s 9.30AM	s 10.35AM	s 11.30AM	¶ 2.35PM	s 2.50PM			5.00PM	9.00PM			Term. Yard WFTYPBK
				ELVAS 1.5		74.1	3.38	3.58	4.38	6.33	8.43	9.18	10.23	11.18	2.23	2.38	8.35AM		4.45	8.45	11.40PM		PIY Yard
				SWANSTON 1.6		72.6																	
				BENALI 4.5		71.0	3.32	3.47	4.30	6.27	8.38	f 9.12	10.19	11.12	2.13	2.33							P 89
				WALERGA 3.4		66.5						f											No Siding P
				ANTELOPE 3.0		63.1	3.22	3.35	4.20	6.17	8.28	s 9.02	10.09	11.02	2.00	2.23							P 60
				TO-R ROSEVILLE YD. 0.8		60.1											8.00 6.00	4.00PM	4.00PM	8.00PM	11.00PM		Term. Yard TFWYPBK
				ROSEVILLE 1.3		59.3	s 3.15	3.25AM	4.10	6.10	8.22	s 8.53	10.03	10.55AM	s 1.47	2.17PM							
				ENWOOD 2.7		58.0																	
4.15AM	s 8.20AM	s 4.30PM		TO ROCKLIN 3.3		55.3	f 3.00		3.50	5.55	8.12	s 8.43	9.51		s 1.33			3.40					P Yard
4.50 5.49	s 8.33	s 4.39		TO LOOMIS 2.7		52.0	f 2.50		3.43	5.49	8.06	s 8.33	9.45		s 1.25			2.43					P 60
6.10 6.30	s 8.42	s 4.49		TO PENRYN 3.0		49.3	f 2.40		3.35	5.43	8.00	s 8.25	9.39		s 1.18			2.07					P 55
6.50AM	s 8.55AM	s 5.00PM		TO NEWCASTLE 1.9		46.3	s 2.30		3.26	f 5.36	7.54	s 8.15	9.33		s 1.10			1.10					WP 73
				ZETA 2.1		44.4						f 8.07			f								Spur 7
				FLINT 0.9		42.3																	P 73
				TO AUBURN 3.9		41.4	s 2.15		3.13	f 5.23	7.42	s 8.00	9.21		s 12.55		4.30	12.01PM					WP 56
				BOWMAN 2.5		37.5	2.00		3.05	5.15	7.34	f 7.49	9.13		f 12.43								P 78
				CLIPPER GAP 3.0		35.0	1.54		2.58	5.08	7.28	f 7.42	9.06		f 12.36								P 70
				WEST APPLEGATE 3.2		32.0	f 1.47		2.51	5.01	7.22	s 7.35	9.00		f 12.29								Spur PW 55
				N. E. MILLS 2.0		28.8	1.39		2.43	4.53	7.15	s 7.28	8.53		s 12.22								Spur P 55
				LANDER 3.0		26.8						f			f								Spur 64
				TO **COLFAX** 4.3		23.8	s 1.25		s 2.30	s 4.40	7.03	7.15AM	s 8.40		12.10PM ¶ 11.53AM		3.00	9.10AM				4.00PM	YWPBK Yard
				CAPE HORN 2.5		19.5	1.10		2.13	4.24	6.49		8.26		f 11.43							3.30	P 50
				MAGRA 3.7		17.0									f								Spur 5
				TO GOLD RUN 1.9		13.3	f 12.55		1.59	4.10	6.35		8.12		f 11.25							3.00	WFYP 80
				DUTCH FLAT 1.9		11.4	f 12.48		1.54	4.06	6.31				f 11.21								Spur P 6
				ALTA 0.8		9.5	f								s								Spur P 4
				TO TOWLE 1.8		8.7	f 12.40		1.47	4.00	6.25		8.02		f 11.14								WP Spur 5
				*GORGE 1.0		6.9	12.34		1.42	3.55	6.21		7.58		f 11.10							2.20	Spur 5
				AMERICAN 1.1		5.9							s		s								
				MIDAS 2.3		4.8	12.28		1.36	3.49	6.16		7.51		f 11.00							2.05	P 80
			Staff Sys	FOREBAY 2.1		2.5	12.23		1.31	3.43	6.11		7.46		f 10.55							1.50	WP Spur 10
				B. C. JUNCTION 0.4		0.4	12.18		1.27	3.38	6.07		7.42		10.50							1.35	P
				TO-R **BLUE CANON**		0.0	12.15AM		1.25AM	3.35AM	6.05AM		7.40AM		10.48AM		1.35AM					1.30PM	60 PTWBK
Ar. Daily Ex. Sunday	Arrive Daily	Arrive Daily		(77.1)			Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily	Lv. Daily Ex. Sunday	Leave Daily	Leave Tues Thurs. and Saturdays	
				Time over District			(3.35)	(0.45)	(3.30)	(3.10)	(2.50)	(2.15)	(2.55)	(0.35)	(3.47)	(0.33)	(5.00)	(6.50)	(1.00)	(1.00)	(0.40)	(2.30)	
				Average speed per hour			21.22	23.73	21 90	24.34	27.01	23.68	26.43	30.51	20.38	32.36	15.20	5.22	19.16	19.16	19.82	9.52	

The above schedules are shown only for information and have no time table superiority between Loomis and Newcastle, but will be known by their numbers and handled only by train orders between Loomis and Newcastle.

Westward trains receiving orders east of Newcastle moving an eastward train from Loomis to Newcastle against them, must not pass east cross-over switch at Newcastle until opposing trains on No. 1 Track have arrived.

Westward trains must stop east of east cross-over switch at Newcastle unless they receive a proceed train-order signal.

Nos. 24, 34 and 306 will use No. 4 Track Rocklin to Loomis.

*Frog in part of season.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS				
Train	At	Receive or Discharge	Passengers to (or beyond)	Passengers from (or beyond)
13, 57, 15	Any Station	Discharge		Lincoln
1	Any Station	Discharge		Cheyenne
5, 19, 21	Any Station	Discharge		Sparks

EASTWARD

Time Table No. 118

January 28, 1923

Capacity of sidings in car lengths	THIRD CLASS			FIRST CLASS								Distance from San Francisco		STATIONS	
	254	308	310	124	22	2	24	204	10	6	20				
	Ogden Manifest	Local Freight	Local Freight	Reno-Sparks Passenger	St. Louis Express	San Francisco Overland Limited	Tonopah Express	Reno-Fallon Motor	Atlantic Express	Nevada Express	Pacific Limited				
	Leave Daily	Leave Mon., Wed., Fri.	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily				
77 PTWBK	10.10PM	10.55AM			8.30PM	5.55PM	11.45AM		5.45AM	2.10AM	12.55AM	166.6	Staff System	TO-R **BLUE CANON** 1.7	
78 P		11.10			8.38	6.02	f 11.52AM		5.58	2.18	1.00	168.3		GUNTER 1.4	
70 P							f					169.7		FULDA 2.1	
67 PT		11.30			s 8.52	6.13	s 12.07PM		6.11	2.31	1.10	171.8		EMIGRANT GAP 1.5	
51 P	11.47	11.45AM			8.58	6.18	s 12.15		6.16	2.37	1.17	173.3		**SMART** 2.8	
69 P	11.59PM	12.05PM			9.07	6.27	f 12.25		6.23	2.46	1.26	176.1		YUBA PASS 2.2	
65 PW	12.05AM	12.33			9.16	6.34	f 12.33		6.30	2.55	1.36	178.3		CRYSTAL LAKE 2.0	
65 PW		1.20			9.25	6.40	s 12.42		6.39	f 3.05	1.44	180.3		CISCO 3.5	
53 P	12.31	1.55			9.37	6.50	f 12.55		6.50	3.17	1.55	183.8		TAMARACK 2.0	
65 PW		2.05			9.44	6.56	f 1.02		6.57	3.23	2.01	185.8		TROY 2.1	
59 P		2.20			9.52	7.03	f 1.09		7.05	3.30	2.08	187.9		SPRUCE 2.8	
68 P		2.30			10.01	7.11	s 1.19		7.14	3.38	2.17	190.7		SODA SPRINGS 2.3	
84 PTWB		3.05			10.10	7.20	s 1.30		s 7.25	s 3.50	2.25	193.0		SUMMIT 0.7	
66 P	2.08				10.15	7.25	1.33		7.30	3.55	2.28	193.7		TUNNEL SIX 2.5	
54 P		3.20			10.23	7.32	f 1.41		7.38	4.03	2.35	196.2		LAKE VIEW 2.0	
60 P		3.35			10.29	7.39	f 1.49		7.45	4.10	2.41	198.2		EDER 2.4	
57 PT	2.48	3.50			10.35	7.46	f 1.57		7.53	4.18	2.48	200.6		ANDOVER 2.3	
69 PW		4.00			10.40	7.51	f 2.04		8.00	4.28	2.54	202.9		STANFORD 1.2	
73 P							f					204.1		CHAMPION 1.7	
69 P		4.20			10.48	7.59	f 2.15		8.12	4.40	3.02	205.8		DONNER 2.2	
Term. Yard PWTYFBK	4.00	4.30PM	10.30AM		s 11.00	s 8.10	s 2.30		s 8.20 8.35	s 5.10	s 3.15	208.0	Block Signals	TO-R **TRUCKEE** 3.1	No. 2 Track
48 (Spur)							f		f	f		211.1		* POLARIS 3.9	
53 (Spur)							f			f		215.0		*PROSSER CREEK 1.3	
20 WP			11.20		11.20	8.30	s 2.55		s 9.07	s 5.40	3.35	216.8		TO BOCA 1.8	
80 P												218.1		HINTON 4.3	
75 PW			11.45AM		11.36	8.44	s 3.12		9.23	s 5.55	3.48	222.4		TO FLORISTON 3.1	
20 (Spur) PW					11.43	8.50	f 3.20		9.31	6.02	3.54	225.5		MYSTIC 3.0	
No Siding W												228.5		CALVADA 3.9	
100 P	6.20		12.30PM		11.59PM	9.05	s 3.40		9.50	s 6.20	4.09	232.4		TO **VERDI** 4.8	
6 (Spur) W					12.08AM	9.15	f 3.50		10.00	6.30	4.19	237.2		LAWTON 5.7	
Yard P	7.40		1.25	4.15PM	s 12.25	s 9.30	s 4.00 6.30	3.45PM	s 10.40	s 7.10	s 4.35	242.9		**RENO** 2.6	
Yard				s 4.25	12.35		s 6.40	s 3.50	s 10.55	s 7.25		245.5		SPARKS (Passenger Station) 0.7	
Term. Yard FWTPBK	8.00AM		2.00PM	s 4.30PM	s 12.40AM	s 9.40PM	s 6.45PM	s 3.55PM	s 11.00AM	s 7.30AM	s 4.45AM	246.2		TO-R **SPARKS** (Dsprs Office)	
	Arrive Daily	Arrive Mon., Wed., Fri.	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily			(79.6)	
	(9.50) 8.08	(5.35) 7.05	(3.30) 10.47	(0.15) 13.20	(4.10) 19.10	(3.45) 21.22	(4.30) 17.66	(0.10) 19.80	(5.00) 15.92	(5.20) 14.92	(3.50) 21.20	……Time over district ……Average speed per hour			

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS

Train	At	Receive or Discharge	Passengers to (or beyond)	Passengers from (or beyond)
6	Union Mills, Farad, Fleish and Mogul	Receive or Discharge	Any Station	Any Station
24	Summit Hotel, Union Mills, Iceland, Farad, Fleish, Mogul	Receive or Discharge	Any Station	Any Station
22	Summit Hotel	Receive or Discharge	Any Station	Any Station
2, 20	Any Station	Receive	Cheyenne	
22, 10	Any Station	Receive	Ogden	
10	Iceland	Receive or Discharge	Any Station	Any Station

***Frog taken out part of season.**

Water tank Mystic and Lawton on No. 1 track only.

Lawton Spur and cross-over 0.7 mile east of station board.

RULE 206 (A). Clearance card creating No. 24 will authorize use of schedule to Reno only.

Engine and crews arriving Reno on No. 24 will fulfill the schedule of No. 124 Reno to Sparks.

Salt Lake Division engine and crews will fulfill schedule of No. 24 Reno to Sparks and need not obtain a train order to do so.

On double track between Sparks and Truckee, trains keep to the left. Westward trains use No. 1 track, Eastward trains No. 2 track. Signals used by trackmen will be placed on left of track in direction of movement.

Additional Stations		
	Union Mills 213.5,	Farad 224.7,
	Iceland 220.9,	Fleish 229.8,
	Wickes 221.5,	Mogul 235.8.

Salt Lake Division extends west to Mile Post 238.6. Train movements governed by Sacramento Division time table.

Time Table No. 118

January 28, 1923

WESTWARD

			FIRST CLASS							THIRD CLASS		
		Distance from Sparks	9	1	23	203	5	19	21	309	307	253
			Fast Mail	San Francisco Overland Limited	Sparks San Francisco Passenger	Fallon Reno Motor	Nevada Express	Pacific Limited	St. Louis Express	Local Freight	Local Freight	Ogden Manifest
	STATIONS		Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily Ex. Sunday	Ar. Tues. Thur. & Sat.	Arrive Daily
Staff System	TO-R **BLUE CANON** 1.7	79.6	s 6.02AM	s 7.35AM	s 10.45AM		s 12.07AM	s 1.21AM	s 3.30AM		1.15PM	12.55AM
	GUNTER 1.4	77.9	5.58	7.31	f 10.40		12.03AM	1.17	3.24		12.28	
	FULDA 2.1	76.5			f							
	EMIGRANT GAP 1.5	74.4	5.50	7.23	s 10.30		s 11.53PM	1.10	3.14		12.07PM	12.25AM
	SMART 2.8	72.9	5.46	7.19	f 10.24		f 11.47	1.02	3.10		11.45AM	
	YUBA PASS 2.2	70.1	5.40	7.12	f 10.17		11.40	12.55	3.03		11.15	11.59PM
	CRYSTAL LAKE 2.0	67.9	5.35	7.06	f 10.10		11.32	12.48	2.55		10.55	
	CISCO 3.5	65.9	5.30	7.00	s 10.03		s 11.25	12.42	2.48		10.27	11.25
	TAMARACK 2.0	62.4	5.20	6.50	f 9.50		11.12	12.31	2.37		9.50	
	TROY 2.1	60.4	5.15	6.45	f 9.43		11.06	12.25	2.31			
	SPRUCE 2.8	58.3	5.09	6.39	f 9.36		11.00	12.19	2.25		8.47	9.52
	SODA SPRINGS 2.3	55.5	5.02	6.32	f 9.28		f 10.53	12.12	2.17		8.15	
	SUMMIT 0.7	53.2	4.55	6.25	s 9.20		s 10.45	12.05	2.10		8.00	9.00
	TUNNEL SIX 2.5	52.5	4.52	6.22	9.14		10.42	12.03AM	2.08		7.30	
	LAKE VIEW 2.0	50.0	4.45	6.14	f 9.05		10.35	11.54PM	1.59			7.32
	EDER 2.4	48.0	4.40	6.07	f 8.57		10.29	11.47	1.53			
	ANDOVER 2.3	45.6	4.34	6.00	f 8.48		10.20	11.40	1.46			
	STANFORD 1.2	43.3	4.28	5.53	f 8.39		10.14	11.34	1.40			
	CHAMPION 1.7	42.1			f							
	DONNER 2.2	40.4	4.20	5.45	f 8.28		10.03	11.23	1.31			
Block Signals No. 1 Track	TO-R **TRUCKEE** 3.1	38.2 38.0	s 4.15	s 5.40	8.20 ¶ 8.00		s 9.55	s 11.15	s 1.25	10.00AM	6.35AM	6.00
	*POLARIS 3.9	34.9			f		f					
	*PROSSER CREEK 1.3	31.0			f		f					
	TO BOCA 1.8	29.7	3.53	5.17	s 7.37		s 9.12	10.50	12.59	9.15		4.15
	HINTON 4.3	27.9										
	TO FLORISTON 3.0	23.6	3.40	5.03	s 7.20		s 8.57	10.36	12.44	8.30		
	MYSTIC 3.0	20.6	3.33	4.56	f 7.10		f 8.49	10.30	12.36			
	CALVADA 3.9	17.6										
	TO **VERDI** 4.7	13.7	3.20	4.43	s 6.55		s 8.33	10.15	12.22	7.35		2.00
	LAWTON 5.7	9.0	3.10	4.33	f 6.45		f 8.20	10.05	12.10			
	RENO 2.6	3.3	s 3.02	s 4.25	s 6.35	s 10.15AM	s 8.10	s 9.55	s 12.01AM	6.50		1.00
	SPARKS (Passenger Station) 0.7	0.7	2.53	4.15	s 6.20	s 10.10	s 7.50	9.40	s 11.50PM			
	TO-R **SPARKS** (DsprsOffice)	0.0	2.50AM	4.10AM	6.15AM	10.05AM	7.45PM	9.35PM	11.45PM	6.30AM		12.30PM
	(79.6)		Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Lv. Tues. Thur. & Sat.	Leave Daily
	Time over District		(3.12)	(3.25)	(4.10)	(0.10)	(4.22)	(3.46)	(3.45)	(3.30)	(6.40)	(12.25)
	Average speed per hour		23.85	23.15	19.10	19.80	18.56	21.20	21.22	10.47	6.02	6.49

*Frog taken out part of season.
Water tank Mystic and Lawton on No. 1 track only.
Lawton Spur and cross over 0.7 mile east of station board.

On double track between Sparks and Truckee, trains will keep to the left. Westward trains use No. 1 Track and Eastward trains No. 2 Track. Signals used by trackmen will be placed on the left of track in direction of movement.

Salt Lake Division extends west to Mile Post 238.6. Train movements governed by Sacramento Division time table.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS

Train	At	Receive or Discharge	Passengers to (or beyond)	Passengers from (or beyond)
5, 23	Mogul, Fleish Farad, Iceland Union Mills Summit Hotel	Receive or Discharge	Any Station	Any Station
5, 19, 21	Any Station	Discharge		Sparks
1	Any Station	Discharge		Cheyenne

EASTWARD

Time Table No. 118

January 28, 1923

Capacity of sidings in car lengths.	FOURTH CLASS			THIRD CLASS	FIRST CLASS							Distance from San Francisco		STATIONS
	230	228	224	222	44	12	58	14	56	16	54			
	Local Freight	Local Freight	Local Freight	Portland Fast Freight	Sacramento Gerber Passenger	The Shasta	Sacramento Chico Passenger	Portland Express	Sacramento Dunsmuir Passenger	Oregon Express	Oregonian			
	Leave Daily Ex. Sunday	Leave Daily Ex. Sunday	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily			
	7.15PM			8.40AM			4.35PM	1.10PM		12.30AM		88.8		**SACRAMENTO**
Term Yard BKFPTWY	8.30PM			3.00PM								105.8	TO-R	ROSEVILLE YARD 0.8
							5.10PM	1.47PM		1.05AM		106.6	R	**ROSEVILLE** 6.2
49 P	8.45			3.25			5.20	2.04		1.20		112.8		WHITNEY 4.2
134 PW	9.15			3.50			s 5.30	s 2.17		s 1.33		117.0	TO	LINCOLN 1.3
34 Spur												118.3		CLAYTON 2.7
38	9.30			4.10			f 5.36	2.25		1.42		121.0		EWING 3.8
32	9.45			4.42			s 5.43	f 2.32		f 1.49		124.8		SHERIDAN 3.3
138 PW	10.30			4.55			s 5.50	s 2.40		s 2.00		128.1	TO	WHEATLAND 6.1
103 P	10.45			5.15			f 6.00	f 2.50		2.10		134.2		OSTROM 6.6
Yard BKIYFWP	11.10PM	7.00AM		6.15			s 6.15	s 3.15		s 2.45		140.8	TO-R	**MARYSVILLE** 1.0
													Block Signals	W. P. R. R. Crossing 2.9
112		7.15		6.45			f 6.23	3.23		2.53		144.7		BERG 3.0
43		7.25		7.00			f 6.28	f 3.28		2.59		147.7		LOMO 2.1
8 Spur							f					149.8		SUNSET 1.7
54 I		7.50		7.20			s 6.35	s 3.35		f 3.10		151.5	TO	LIVE OAK S. N. R. R. Crossing. 4.4
5 Spur												155.9		FAGAN 2.1
120 K		8.45		7.50			s 6.47	f 3.47		s 3.25		158.0	TO	GRIDLEY 3.4
49 W		9.15		8.10			s 6.54	s 3.55		s 3.35		161.4	TO	BIGGS 2.7
5 Spur												164.1		RICETON 3.3
49		9.45					f 7.07	f 4.07		f 3.47		167.4	TO	RICHVALE 4.1
119 P		10.00		9.00			f 7.15	s 4.15		f 3.55		171.5		NELSON 6.6
100		10.25		9.35			s 7.28	f 4.27		f 4.07		178.1	TO	DURHAM 3.8
9 Spur												181.9		FAULKNER 2.3 S. N. R. R. Crossing
Yard BKYWF		11.40		10.05			s 7.40PM	s 4.45		s 4.30		184.2	TO	**CHICO** 4.9
7 Spur												189.1		GIMBAL 2.2
29								f 4.58		4.45		191.3		NORD 2.3
112		11.55AM		10.30				5.02		4.50		193.6		ANITA 2.4
20								f 5.06		4.55		196.0		CANA 2.6
5 Spur												198.6		SOTO 4.4
100 W		12.30PM		11.29PM				s 5.19		f 5.10		203.0	TO	VINA 1.6
15												204.6		COPELAND 2.5
12 Spur												207.1		ENSIGN 0.9
8 Spur								f				208.0		BOHEMIA 1.7
48				12.05AM				f 5.35		f 5.30		209.7	TO	LOS MOLINOS 2.0
120 PY		1.08	6.45AM	12.20	11.30PM	9.47PM		f 5.43	2.20PM	s 5.40	5.10AM	211.7	Block Signals TO-R	TEHAMA 2.1
Term Yard BKWFPY		1.25PM	7.00AM	12.35AM	s 11.40PM	s 9.55PM	s 5.50PM		s 2.30PM	s 5.50AM	s 5.20AM	213.8	TO-R	GERBER
	Arrive Daily Ex. Sunday	Arrive Daily Ex. Sunday	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	(108.0)		
Marysville Yard—see page 10	(2.40) 12.82	(6.25) 10.83	(0.15) 8.00	(9.35) 11.20	(0.10) 12.60	(0.08) 15.75	(2.30) 31.04	(4.00) 26.80	(0.10) 12 60	(4.45) 22.56	(0.10) 12.60			........................Time over District ....Average speed per hour

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS

Train	At	Receive or Discharge	Passengers to (or beyond)	Passengers from (or beyond)
16	Any Station	Receive	Portland	
58	Sativa	Receive or discharge	Any Station	Any Station

Schedule time and train orders will apply at the Junction Switch at Tehama.

The schedule of No. 58 terminates at the passenger station at Chico.

Westward trains are superior to trains of the same class in the opposite direction.

Trains to and from Oroville, on Woodland Oroville line use Marysville siding.

Eastward trains when taking siding at Marysville will use cross-over just West of West Water Column.

Eastward trains when taking siding at Nelson will use cross-over just East of station building.

Additional Stations: Jester Spur 125.4; Rupert Spur 138.9; Binney Junction Tower 141.8; Sativa 165.2; Vecino 186.6

WESTWARD

Time Table No. 118

January 28, 1923

	STATIONS	Distance from Gerber	FIRST CLASS							THIRD CLASS	FOURTH CLASS		
			53	43	57	15	11	55	13	221	223	227	229
			Oregonian	Gerber Sacramento Passenger	Chico Sacramento Passenger	California Express	The Shasta	Dunsmuir Sacramento Passenger	San Francisco Express	Portland Fast Freight	Local Freight	Local Freight	Local Freight
			Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily Ex. Sunday	Arrive Daily Ex. Sunday	Arrive Daily Ex. Sunday
	SACRAMENTO	125.0			11.30AM	2.50PM			4.10AM				9.00PM
TO-R	ROSEVILLE YARD 0.8	108.0								10.00PM			8.00PM
R	**ROSEVILLE** 6.2	107.2			s 10.55AM	s 2.17PM			s 3.20AM				
	WHITNEY 4.2	101.0			f 10.41	2.04			3.05	9.30			7.30
TO	LINCOLN 1.3	96.8			s 10.35	s 1.55			s 2.55	9.15			7.15
	CLAYTON 2.7	95.5											
	EWING 3.8	92.8			f 10.25	1.45			2.42	8.45			6.30
	SHERIDAN 3.3	89.0			s 10.20	f 1.38			2.33	8.35			6.10
TO	WHEATLAND 6.1	85.7			s 10.15	s 1.32			s 2.25	8.20			5.50
	OSTROM 6.6	79.6			f 10.05	1.22			2.10	7.50			5.15
TO-R	**MARYSVILLE** 1.0	73.0			s 9.55	s 1.10			s 1.55	7.15		12.15PM	5.00PM
Block Signals	W. P. R. R. Crossing 2.9												
	BERG 3.0	69.1			f 9.45	12.54			1.31	6.45		11.55AM	
	LOMO 2.1	66.1			f 9.40	12.49			1.26	6.28		11.45	
	SUNSET 1.7	64.0			f								
TO	LIVE OAK S. N. R. R. Crossing 4.4	62.3			s 9.33	s 12.43			f 1.20			11.30	
	FAGAN 2.1	57.9											
TO	GRIDLEY 3.4	55.8			s 9.23	s 12.32			s 1.08	5.20		11.00	
TO	BIGGS 2.7	52.4			s 9.15	s 12.21			s 12.58	4.50		10.05	
	RICETON 3.3	49.7											
TO	RICHVALE 4.1	46.4			s 9.04	f 12.09			f 12.46			9.45	
	NELSON 6.6	42.3			s 8.54	f 12.01PM			f 12.39	4.15		9.25	
TO	DURHAM 3.8	35.7			s 8.42	s 11.51AM			f 12.27			9.05	
	FAULKNER 2.3	31.9											
TO	S. N. R. R. Crossing **CHICO** 4.9	29.6			8.30AM	s 11.40			s 12.15AM	3.30		8.45	
	GIMBAL 2.2	24.7											
	NORD 2.3	22.5				f 11.22			11.53PM				
	ANITA 2.4	20.2				f 11.18			11.48	2.10		7.40	
	CANA 2.6	17.8				f 11.14							
	SOTO 4.4	15.2											
TO	VINA 1.6	10.8				s 11.03			f 11.29	1.30		7.10	
	COPELAND 2.5	9.2											
	ENSIGN 0.9	6.7											
	BOHEMIA 1.7	5.8				f							
TO	LOS MOLINOS 2.0	4.1				s 10.50			f 11.16			6.30	
Block Signals TO-R	TEHAMA 2.1	2.1	3.17AM	s 7.57AM		s 10.42	2.47PM	s 2.57PM	s 11.10	1.08	2.10AM	6.15	
TO-R	**GERBER**	0.0	3.10AM	7.50AM		10.35AM	2.40PM	2.50PM	11.00PM	12.50PM	2.00AM	6.00AM	
	(108.0)		Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily Ex. Sunday	Leave Daily Ex. Sunday
	Time over District…… Average speed per hour……		(0.07) 15.83	(0.07) 15.83	(2.25) 32.44	(3.42) 29.19	(0.07) 15.83	(0.07) 15.83	(4.20) 24.92	(9.10) 10.80	(0.10) 12.60	(6.15) 11.68	(3.00) 12.00

Westward trains are superior to trains of the same class in the opposite direction.

Schedule time and train orders will apply at the Junction Switch at Tehama.

Additional Stations: Jester Spur 125.4 Rupert Spur 138.9; Binney Junction Tower 141.8; Sativa 165.2; Vecino 186.6.

Trains to and from Oroville, on Woodland Oroville line, use Marysville siding.

Marysville Yard see page 10.

The schedule of No. 57 originates at the passenger station at Chico.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS

Train	At	Receive or Discharge	Passengers to (or beyond)	Passengers from (or beyond)
15	Any Station	Discharge		Ashland
13	Any Station	Discharge		Portland
57	Sativa	Receive or Discharge	Any Station	Any Station

EASTWARD.

Time Table No. 118

January 28, 1923

Capacity of sidings in car lengths.	THIRD CLASS				SECOND CLASS	FIRST CLASS					Distance from San Francisco		STATIONS
	224	366	368	226	128	542	44	12	56	54			
	Local Freight	Colusa Branch Local Freight	Colusa Branch Local Freight	Local Freight	Colusa Branch Motor	Sacramento-Oroville MOTOR	Sacramento-Gerber Passenger	The Shasta	Sacramento-Dunsmuir Passenger	Oregonian			
	Lv. Daily Ex. Sunday	Lv. Mon., Wed. & Fri.	Lv. Tues., Thurs. & Sat.	Lv. Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily			
IWBKFTYP				W. D. No. 271 6.00 AM		W. D. No. 77 7.30 PM	W. D. No. 75 7.20 PM		W. D. No. 73 10.00 AM		88.8		Sacramento
The figures at Sacramento given above are for information only. Trains between Sacramento and Davis will be governed by Western Division time table.													
Terminal Yard IWYP				7.00AM		8.10PM	8.00PM	7.15PM	10.35AM	1.50AM	75.6	TO-R	**DAVIS** 5.1
49				7.15		f 8.20	f 8.10	7.22	f 10.45	2.01	80.7		**MERRITT** 2.5
20				7.25		f 8.25	f 8.14	7.26	f 10.50	2.05	83.2		**MULLEN** 1.7
68 IPW				7.40		s 8.30PM	s 8.20	7.30	s 11.00	2.10	84.9	TO-R	**WOODLAND** S. N. R. R. Crossing 4.3
30 Spur							f		f		89.2		**ELVATON** 0.7
30				8.15			s 8.30	7.37	s 11.10	2.18	89.9	TO	**YOLO** 2.2
14 Spur							f		f		92.1		**DUFOUR** 1.6
6 Spur							f		f		93.7		**RONDA** 2.1
43				8.35			f 8.40	7.44	s 11.23	2.27	95.8	TO	**ZAMORA** 2.2
20							f 8.44	7.47	f 11.32	2.30	98.0		**BRETONA** 5.2
38 WP			7.00AM	9.05			s 8.54	7.54	s 11.45	2.38	103.2	TO	**DUNNIGAN** 3.2
43			7.10	9.15			f 9.00		f 11.50	2.43	106.4		**HERSHEY** 1.9
118 119 YP			7.20AM	9.20			f 9.04	8.01	s 11.55AM	2.46	108.3		**HARRINGTON** 5.2
49				9.40			s 9.13	8.08	s 12.05PM	2.53	113.5	TO	**ARBUCKLE** 4.1
35 W				9.55			f 9.20	8.13	f 12.12	2.59	117.6		**GENEVRA** 0.9
15							f		f		118.5		**MACY** 5.7
57				10.25			s 9.30	8.21	s 12.22	3.09	124.2	TO	**WILLIAMS** 4.9
49				10.50			f 9.37	8.27	f 12.29	3.15	129.1		**CORTENA** 3.9
50 W				11.40			s 9.43	8.32	s 12.35	3.21	133.0	TO	**MAXWELL** 5.3
47				11.59AM			f 9.51	8.39	f 12.43	3.29	138.3		**DELAVAN** 3.8
40				12.30PM			f 9.57	8.44	f 12.49	3.35	142.1		**NORMAN** 2.2
36				12.52			f 10.00	8.47	f 12.52	3.38	144.3		**LOGANDALE** 5.6
64 WFY				1.30			s 10.15	8.55	s 1.05	3.50	149.9	TO	**WILLOWS** 3.3
10				1.45			f		f		153.2		**LYMAN** 3.6
48				2.00			f 10.25	9.04	s 1.16	4.10	156.8	TO	**ARTOIS** 3.9
62				2.15			f 10.32		f 1.23	4.18	160.7		**GRAPIT** 1.3
36				2.25			f		f		162.0		**GREENWOOD** 3.4
45 PW	5.00AM	6.00AM		2.40PM	7.50AM		s 10.45	9.15	s 1.35	4.30	165.4	Block Signals TO-R	**ORLAND** 1.6
42 PY	5.15	6.10AM			7.55AM		f 10.48	9.18	f 1.38	4.33	167.0	Block Signals	**WYO** 2.0
16							f		f		169.0		**MALTON** 4.4
30	5.35						f 10.59	9.26	f 1.49	4.45	173.4		**KIRKWOOD** 5.1
51	6.00						s 11.10	9.33	s 2.00	4.55	178.5	TO	**CORNING** 3.1
49	6.20						f 11.18	9.38	f 2.08	5.01	181.6		**RICHFIELD** 4.7
120 YP	6.40AM						s 11.30PM	9.47PM	s 2.20PM	5.10AM	186.3	TO-R	**TEHAMA**
	Ar. Daily Ex. Sunday	Ar. Mon., Wed. & Fri.	Ar. Tues., Thurs. & Sat.	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily			(110.7)
	(1.40) 12.54	(0.10) 9.60	(0.20) 15.30	(7.40) 11.70	(0.05) 19.20	(0.20) 27.90	(3.30) 31.62	(2.32) 43.69	(3.45) 29.52	(3.20) 33.21	………………Time over District ………………Average speed per hour		

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS

Train	At	Receive or Discharge	Passengers to (or beyond)	Passengers from (or beyond)
54	Woodland, Arbuckle, Williams, Maxwell, Willows, Orland, Corning	Receive	Ashland, where train is scheduled to stop.	
12	Woodland	Receive	Ashland, where train is scheduled to stop	

Westward trains are superior to trains of the same class in the opposite direction.

Schedule time and train orders will apply at the Junction Switch at Tehama.

ADDITIONAL STATIONS:—Riz-146.0.
Houx 126.8.

WESTWARD

Time Table No. 118

January 28, 1923

	STATIONS	Distance from Tehama	53	43	11	55	541	131	223	225	367	369
			FIRST CLASS					SECOND CLASS	THIRD CLASS			
			Oregonian	Gerber Sacramento Passenger	The Shasta	Dunsmuir Sacramento Passenger	Oroville Sacramento MOTOR	Colusa Branch MOTOR	Local Freight	Local Freight	Colusa Branch Local Freight	Colusa Branch Local Freight
			Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily Ex. Sunday	Arrive Daily Ex. Sunday	Ar. Mon., Wed. & Fri.	Ar. Tues., Thurs. & Sat.
	Sacramento	123.9		W.D. No. 76 1.10 PM		W.D. No. 78 7.20 PM	W.D. No. 74 8.40 AM			W.D. No. 272 2.40 PM		

The figures at Sacramento given above are for information only. Trains between Davis and Sacramento will be governed by Western Division time table.

	STATIONS	Distance from Tehama	53	43	11	55	541	131	223	225	367	369
TO-R	**DAVIS** 5.1	110.7	s 6.35AM	s 12.35PM	s 5.30PM	s 6.45PM	s 8.10AM			1.30PM		
	MERRITT 2.5	105.6	6.22	f 12.20	5.18	f 6.30	f 8.00			1.15		
	MULLEN 1.7	103.1	6.16	f 12.12	5.13	f 6.23	f 7.55					
TO-R	**WOODLAND** S. N. R. R. Crossing. 4.3	101.4	6.12	s 12.05PM	5.10	s 6.20	7.50AM			1.00PM		
	ELVATON 0.7	97.1		f								
TO	**YOLO** 2.2	96.4	6.02	s **11.50AM**	5.03	s 6.05				**11.50AM**		
	DUFOUR 1.6	94.2		f		f						
	RONDA 2.1	92.6		f		f						
TO	**ZAMORA** 2.2	90.5	5.52	s 11.38	4.55	s 5.55				**11.23**		
	BRETONA 5.2	88.3	5.48	f **11.32**	4.51	f 5.50						
TO	**DUNNIGAN** 3.2	83.1	5.40	s 11.17	4.44	s 5.42				10.55	11.05AM	
	HERSHEY 1.9	79.9	5.35	f 11.09		f 5.36					10.55	
	HARRINGTON 5.2	78.0	5.32	s 11.05	4.37	f 5.33				10.35	10.50AM	
TO	**ARBUCKLE** 4.1	72.8	5.24	s 10.50	4.30	s 5.25				10.20		
	GENEVRA 0.9	68.7	5.18	f 10.38	4.24	f 5.15				**9.55**		
	MACY 5.7	67.8		f		f				9.15		
TO	**WILLIAMS** 4.9	62.1	5.07	s **10.25**	4.15	s 5.04				9.00		
	CORTENA 3.9	57.2	4.59	f 10.12	4.08	f 4.57				8.20		
TO	**MAXWELL** 5.3	53.3	4.53	s 10.05	4.03	s 4.50				8.00		
	DELAVAN 3.8	48.0	4.44	f 9.57	3.55	f 4.40				7.35		
	NORMAN 2.2	44.2	4.37	f 9.50		f 4.33				7.25		
	LOGANDALE 5.6	42.0	4.33	f 9.45	3.47	f 4.29				7.15		
TO	**WILLOWS** 3.3	36.4	4.25	s 9.35	3.40	s 4.20				7.00		
	LYMAN 3.6	33.1		f		f 4.06				6.15		
TO	**ARTOIS** 3.9	29.5	**4.10**	s 9.10	3.31	s 4.00				6.00		
	GRAPIT 1.3	25.6	4.02	f 9.00	3.25	f 3.51				5.30		
	GREENWOOD 3.4	24.3		f		f 3.48				5.15		
Block Signals TO-R	**ORLAND** 1.6	20.9	3.55	s 8.50	3.18	s 3.40		s 3.05PM	4.20AM	5.00AM		2.30PM
Block Signals	**WYO** 2.0	19.3	**3.52**	f 8.41	3.15	f 3.33		3.00PM	**3.52**			2.20PM
	MALTON 4.4	17.3		f		f 3.30			3.30			
	KIRKWOOD 5.1	12.9	3.41	s 8.30	3.07	f 3.23			3.15			
TO	**CORNING** 3.1	7.8	3.32	s 8.20	2.59	s 3.15			3.00			
	RICHFIELD 4.7	4.7	3.25	s 8.07	2.54	f 3.05			2.30			
TO-R	**TEHAMA**	0.0	3.17AM	7.57AM	2.47PM	2.57PM			2.10AM			
	(110.7)		Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily Ex. Sunday	Lv. Mon., Wed. & Fri.	Lv. Tues. Thurs. & Sat.
	Time over district		(3.18)	(4.38)	(2.43)	(3.48)	(0.20)	(0.05)	(2.10)	(8.30)	(0.15)	(0.10)
	Average speed per hour		33.54	23.89	40.74	29.13	27.90	19.20	9.64	10.56	20.40	9.60

Westward trains are superior to trains of the same class in the opposite direction.

Schedule time and train orders will apply at the Junction Switch at Tehama.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS

Train	At	Receive or Discharge	Passengers to (or beyond)	Passengers from (or beyond)
53	Corning, Orland, Willows, Maxwell, Williams, Arbuckle, Woodland	Receive or Discharge	Sacramento and Port Costa	Ashland

Capacity of sidings in car lengths.	EASTWARD THIRD CLASS		FIRST CLASS	Distance from San Francisco		Time Table No. 118 January 28, 1923	Distance from Oroville	WESTWARD FIRST CLASS	THIRD CLASS	FOURTH CLASS
	234	232	542					541	233	235
	Oroville Local Freight	Knights Landing Local Freight	Sacramento Oroville MOTOR					Oroville Sacramento MOTOR	Knights Landing Local Freight	Oroville Local Freight
	Lv. Mon., Wed. & Fri.	Lv. Daily Ex. Sunday	Leave Daily			STATIONS		Arrive Daily	Ar. Daily Ex. Sunday	Ar. Mon., Wed. & Fri.
68 IBKPW		12.01PM	8.35PM	84.9	TO-R	**WOODLAND** 2.3	63.0	s 7.45AM	11.00AM	
16			f	87.2		GARIO 0.5	60.7	f		
23			f 8.42	87.7		PEART 1.7	60.2	f 7.38		
29 Spur			f	89.4		LAUGENOUR 0.7	58.5	f		
19			f 8.47	90.1		CURTIS 2.3	57.8	f 7.33		
4 Spur			f	92.4		CORANCO 1.6	55.5	f		
25 Spur		12.45	s 8.55	94.0	TO	KNIGHTS LANDING 2.1	53.9	s 7.25	10.15	
5 Spur				96.1		CUNARD 0.4	51.8			
P		1.15	s 9.02	96.5	R	**GRACE** S. P. Crossing 0.9	51.4	s 7.18	9.30	
2 Spur			f	97.4		BYPASS 7.8	50.5	f		
65			f 9.20	105.2		CHANDLER 2.3	42.7	f 7.01		
29		1.50	f	107.5		MARCUSE 2.0	40.4	f 6.57	9.00	
4 Spur			f	109.2		WILSON 2.2	38.4	f		
19 W			s 9.40	111.4		TUDOR 1.0	36.5	s 6.49		
8			f 9.42	112.4		ABBOTT 3.4	35.5	f 6.47		
31			f 9.50	115.8		OSWALD 1.9	32.1	f 6.40		
43			f 9.55	117.7		BOGUE 2.7	30.2	f 6.36		
19 I		2.30	s 10.05	120.4		YUBA CITY S. N. R. R. Crossing 1.4 W. P. R. R. Crossing	27.5	s 6.30	8.20	
Yard			s 10.10	121.8		E STREET, MARYSVILLE 0.6	26.1	s 6.25		
Yard WPYFIBK	12.01PM	3.00PM	s 10.20	122.4	TO-R	**MARYSVILLE** 4.1	25.5	s 6.20	8.00AM	3.10PM
3 Spur			f	126.5		MELLO 4.2	21.4	f		
19			f 10.40	130.6		RAMIREZ 1.1	17.2	f 5.55		
8 Spur			f	131.7		MISSION 3.3	16.2	f		
15 P			s 10.50	135.0		HONCUT 6.6	12.9	s 5.46		
14			f 11.03	141.6		HEARST 0.9	6.3	f 5.33		
35 P			s 11.06	142.5		PALERMO 2.5	5.4	s 5.31		
27			f 11.12	145.0		VILLA VERONA 2.9	2.9	f 5.26		
Yard WTPK	1.15PM		s 11.20PM	147.9	TO-R	**OROVILLE**	0.0	5.20AM		2.00PM
	Ar. Mon., Wed. & Fri.	Ar. Daily Ex. Sunday	Arrive Daily			(63.0)		Leave Daily	Lv. Daily Ex. Sunday	Lv. Mon., Wed. & Fri.
	(1.14) 20.40	(2.59) 12.50	(2.45) 22.90			....Time over District.... ....Average Speed per hour....		(2.25) 26.06	(3.00) 12.50	(1.10) 21.86

Marysville Yard—See trains on pages 6 and 7.
Trains to and from Oroville, use Marysville Siding.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS—Nos. 541 and 542, G Street, Marysville. Saccarus, Vernon, Coulter, Lee, Messick, Coxlane and Baggett.

Passenger trains will stop on flag at road crossing at Marcuse instead of opposite Hotel.

ADDITIONAL STATIONS:—Saccarus-Mile Post 89.7; Vernon 98.7; Coulter 101.8; Lee 102.7; Messick 114.5; Binney Junction Tower 122.7; Coxlane 139.2; Baggett 146.5.

Capacity of sidings in car lengths.	EASTWARD THIRD CLASS	FIRST CLASS	Distance from San Francisco		Time Table No. 118 January 28, 1923	Distance from Wyo	WESTWARD FIRST CLASS	THIRD CLASS
	368	130					129	367
	Local Freight	Motor					Motor	Local Freight
	Leave Tues. Thurs. & Sat.	Leave Daily			STATIONS		Arrive Daily	Ar. Mon., Wed. & Fri.
Yard PY	7.20AM	12.01PM	108.3	R	**HARRINGTON** 4.0	72.1	s 11.00AM	10.45AM
40	7.36	s 12.10	112.3		COLLEGE CITY 3.7	68.1	s 10.47	10.30
33	7.50	f 12.19	116.0		GRAINO 4.8	64.4	f 10.37	10.15
101 W	8.10	s 12.30	120.8		GRIMES 3.6	59.6	s 10.24	9.50
30	8.30	f 12.38	124.4		SYCAMORE 4.4	56.0	f 10.15	9.30
35	8.50	f 12.47	128.8		DOLAN 4.2	51.6	f 10.05	9.05
97	**9.55**	s 1.00	133.0	TO	COLUSA 10.2	47.4	s **9.55**	8.30
50	10.30	f 1.25	143.2		STEGEMAN 2.7	37.2	f 9.30	7.30
39 W	10.45	s 1.32	145.9		PRINCETON 4.5	34.1	s 9.22	7.20
33	11.05	s 1.43	150.4		CODORA 5.2	30.0	s 9.10	7.00
64	11.30	s 1.57	155.6		GLENN 6.5	24.8	s 8.55	6.40
40	11.55AM	f 2.10	162.1		ORDBEND 3.8	18.3	f 8.40	6.20
33	12.25PM	s 2.20	165.9		ROTAVELE 4.0	14.5	f 8.30	6.05
84 W	1.10	s 2.30	169.9	TO	HAMILTON 8.7	10.5	s 8.18	5.50
	1.40	f 2.50	178.7		CORY 1.8	1.8	f 8.00	5.20
42 PY	1.50PM	s 2.55PM	180.4		**WYO**	0.0	7.55AM	5.10AM
	Arrive Tues. Thurs. & Sat.	Arrive Daily			(72.1)		Leave Daily	Leave Mon. Wed. & Fri.
	(6.30) 11.08	(2.54) 25.03			....Time over District.... ....Average speed per hour....		(3.10) 22.80	(5.35) 12.89

ADDITIONAL STATIONS: Nadine-Spur 157.0, Moda 175.2.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS: Nos. 129 and 130 at road crossing near 138f, 148f, Moda and Nadine Spur.

Capacity of sidings in car lengths.	EASTWARD SECOND CLASS	Distance from San Francisco		Time Table No. 118 January 28, 1923	Distance from Fruto	WESTWARD THIRD CLASS
	266					267
	Fruto Mixed					Willows Mixed
	Leave Saturday Only			STATIONS		Arrive Saturday Only
64 WFYBK	7.00AM	149.9	TO-R	**WILLOWS** 2.7	17.0	s 9.10AM
7 Spur	f	152.6		LOSA 3.2	14.6	f
20	f 7.20	155.8		KURAND 3.8	11.1	f 8.55
10	f 7.35	159.6		MILLSHOLM 4.0	7.3	f 8.40
9	f 7.50	163.6		ATHENA 3.3	3.3	f 8.25
19 T	s 8.00AM	166.9	R	**FRUTO**	0.0	8.10AM
	Arrive Saturday Only			(17.0)		Leave Saturday Only
	(1.00) 17.00			....Time over District.... ....Average speed per hour....		(1.00) 17.00

Westward trains are superior to trains of the same class in the opposite direction.

	EASTWARD						WESTWARD	
Capacity of Sidings in Car Lengths	THIRD CLASS	FIRST CLASS	Distance from San Francisco		Time Table No. 118	Distance from Placerville	FIRST CLASS	THIRD CLASS
	264	62			January 28, 1923		61	265
	Local Freight	Sacramento Placerville Motor					Placerville Sacramento Motor	Local Freight
	Leave Daily Ex. Sunday	Leave Daily			STATIONS		Arrive Daily	Arrive Daily Ex. Sunday
WFTYPBK	6.30AM	3.00PM	88.8	TO-R	**SACRAMENTO** 0.5	59.9	s 9.50AM	12.15PM
			89.3		S. N. R. R. Crossing 0.3	59.4		
			89.6		JCT. SWITCH, R STREET 0.1	59.1		
			89.7		S. N. R. R. Crossing Western Pacific Crossing 0.5	59.0		
			90.2		Central California Traction Crossing 0.6	58.5		
I	Via Elvas	Via Elvas	90.8		Western Pacific Crossing 1.2	57.9	Via Elvas	Via Elvas
I			92.0		S. N. R. R. Crossing 0.3	56.7		
Yard			92.3		HOMESTEAD 2.4	56.4		
89 WP	6.50	s 3.17	94.7	TO-R	**BRIGHTON** S. P. Crossing. 0.8	54.0	s 9.33	11.50AM
7 Spur		f	95.5		RAMONA 0.4	53.2		
29	6.55	s 3.20	95.9		PERKINS 1.6	52.8	s 9.31	11.40
9		f	97.5		MANLOVE 1.4	51.2	f	
81	7.05	s 3.26	98.9		MAYHEW 1.8	49.8	f 9.26	11.25
8		f	100.7		ROUTIER 0.9	48.0	f	
22	7.20	s 3.33	101.6	TO	MILLS 1.8	47.1	s 9.22	11.15
35	7.30	f 3.37	103.4		MATHER 1.0	45.3	f 9.19	11.05
35 P	7.35 8.25	s 3.40	104.4	R	**CITRUS** 3.0	44.3	9.17 s 9.02	11.00 10.00
18	8.35	f 3.47	107.4		NIMBUS 0.9	41.3	f 8.56	9.45
31	**8.53**	f	108.3		ALDER CREEK 1.8	40.4	f **8.53**	
25		f 3.53	110.1		NATOMA 1.0	38.6	f 8.48	9.35
25 WY	**9.30**	s 3.58	111.1	TO-R	**FOLSOM** 6.9	37.6	s 8.45	**9.30**
9	10.25	f 4.13	118.0		WHITE ROCK 5.1	30.7	f 8.27	8.50
9 Spur	10.50	f 4.25	123.1		COTHRIN 3.0	25.6	f 8.15	8.30
15	11.20	s 4.34	126.1	TO	LATROBE 1.5	22.6	s **8.09**	**8.09**
4 Spur		f	127.6		FLONELLIS 0.2	21.1	f	
3 Spur			127.8		SWIFT 0.3	20.9		
9 Spur	11.30	f 4.41	128.1		BRELA 1.7	20.6	f 8.04	7.50
6 Spur		f 4.46	129.8		BRANDON 1.6	18.9	f 8.00	
6	11.50AM	f 4.50	131.4		DUGAN 0.3	17.3	f 7.57	7.40
4 Spur		f	131.7		BULLARD 2.3	17.0	f	
2 Spur	12.15PM	f 4.56	134.0		BENNETT 2.9	14.7	f 7.51	7.30
27	12.45	s 5.05	136.9		SHINGLE SPRINGS 3.5	11.8	s 7.45	7.20
6 Spur	1.10	f 5.15	140.4		CUMMINGS 2.3	8.3	f 7.37	7.05
32	1.30	s 5.23	142.7		EL DORADO 2.3	6.0	s 7.31	6.55
23	1.45	s 5.31	145.0	TO	**DIAMOND SPRINGS** 2.7	3.7	s 7.25	6.45
6 Spur			147.7		APEX 1.0	1.0		
Yard WTK	2.00PM	s 5.40PM	148.7	TO-R	**PLACERVILLE**	0.0	7.15AM	6.30AM
	Arrive Daily Ex. Sunday	Arrive Daily			(59.9)		Leave Daily	Leave Daily Ex. Sunday
	(5.50) 11.20	(2.40) 22.46			Time over District Average speed per hour		(2.20) 25.31	(4.45) 12.61

For Fair Oaks Branch trains, see Fair Oaks Branch schedules.

Water—One mile east of Dugan.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS:— Nos. 61 and 62 Soudan, Maltby, Harvey, Bradshaw, Salsbury, Alden, Carpenter and Limestone.

ADDITIONAL STATIONS:—Brown, 97.0,—Alden, 98.0,—Bradshaw, 99.8,—Boyd, 100.3,—Soudan, 103.7,—Salsbury, 105.2, Carpenter, 114.5,—Maltby, 119.4,—Harvey, 121.7,—Limestone, 133.5.

	EASTWARD							WESTWARD		
Capacity of Sidings in Car Lengths	SECOND CLASS	FIRST CLASS		Distance from San Francisco		Time Table No. 118	Distance from Walnut Grove	FIRST CLASS		THIRD CLASS
	238	534	532			January 28, 1923		533	535	239
	Local Freight	Sacramento Walnut Grove MOTOR	Sacramento Walnut Grove MOTOR					Walnut Grove Sacramento MOTOR	Walnut Grove Sacramento MOTOR	Local Freight
	Leave Wed. and Sat. Only	Leave Daily	Leave Daily			STATIONS		Arrive Daily	Arrive Daily	Arrive Wed. and Sat. Only
Terminal Yard WFTYPBK	6.00AM	3.45PM	7.15AM	88.8	TO-R	**SACRAMENTO** 0.5	24.6	s 9.55AM	s 6.25PM	10.40AM
Yard				89.3		S. N. R. R. Crossing 0.3	24.1			
Yard P	6.10	3.50	7.20	89.6		JCT. SWITCH R STREET 2.2	23.8	9.48	6.18	10.30
Yard	6.20	f 3.56	f 7.26	91.8		BATHS 2.4	21.6	f 9.43	f 6.13	10.20
60	6.30	f 4.03	f 7.33	94.2		DEL RIO 3.3	19.2	f 9.37	f 6.07	10.10
60	6.45	s 4.12	s 7.42	97.5		FREEPORT 7.8	15.9	s 9.28	s 5.58	10.00
66 P	7.20	s 4.32	s 8.02	105.3		HOOD 4.0	9.5	s 9.08	s 5.38	9.30
55	7.30	f 4.45	f 8.15	107.9		LAMBERT 3.3	5.5	f 8.54	f 5.24	9.10
No Siding	7.40	f 4.54	f 8.24	111.2		MOFUBA 2.2	2.2	f 8.46	f 5.16	9.00
61 PWY	7.50AM	s 5.00PM	s 8.30AM	113.4	TO-R	**WALNUT GROVE**	0.0	8.40AM	5.10PM	8.50AM
	Arrive Wed. and Sat. Only	Arrive Daily	Arrive Daily			(24.6)		Leave Daily	Leave Daily	Leave Wed. and Sat. Only
	(1.50) 13.41	(1.15) 19.68	(1.15) 19.68			Time over District Average speed per hour		(1.15) 19.68	(1.15) 19.68	(1.50) 13.41

Exception: No. 532 is superior to No. 533.

Exception: No. 534 is superior to No. 535.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS:—All schedule trains at Front and M Street Sacramento, Charles, Pocket, Content, Cronin, Mosher, Acacia, Locke and Rosebud.

ADDITIONAL STATIONS:—Charles Mile Post 93.0; Pocket 96.4; Content 98.9; Cronin 100.1; Mosher 100.9; Acacia 102.6; Rosebud 103.3; Locke and Walnut Grove Wharf 112.6.

	EASTWARD							WESTWARD		
Capacity of Sidings in Car Lengths	SECOND CLASS		FIRST CLASS	Distance from San Francisco		Time Table No. 118	Distance from Fair Oaks	FIRST CLASS	THIRD CLASS	
	272	270	66			January 28, 1923		67	271	273
	Local Freight	Local Freight	Fair Oaks Motor					Fair Oaks Motor	Local Freight	Local Freight
	Leave Daily Ex. Sunday	Leave Daily Ex. Sunday	Leave Daily			STATIONS		Arrive Daily	Arrive Daily Ex. Sunday	Arrive Daily Ex. Sunday
35 P	10.00AM	7.40AM	9.03AM	104.4	R	**CITRUS** 1.9	1.9	s 9.16AM	8.20AM	11.00AM
15 PT	10.10AM	7.50AM	s 9.08AM	106.3	TO-R	**FAIR OAKS**	0.0	9.10AM	8.10AM	10.50AM
	Arrive Daily Ex. Sunday	Arrive Daily Ex. Sunday	Arrive Daily			(1.9)		Leave Daily	Leave Daily Ex. Sunday	Leave Daily Ex. Sunday
	(0.10) 11.40	(0.10) 11.40	(0.05) 22.80			Time over District Average speed per hour		(0.06) 19.00	(0.10) 11.40	(0.10) 11.40

Exception: No. 66 is superior to No. 67.

Westward trains are superior to trains of the same class in the opposite direction.—See exceptions.

SACRAMENTO YARD—INBOUND, VIA ELVAS.

Trains moving from Brighton to Elvas are Eastward, and Elvas to Sacramento Westward.

Time Table No. 118 January 28, 1923			Distance from Brighton	5	13	19	21	24	256	9	33	61	64	1	254	57	265	32	23	15	286	219	68	229	38
				Nevada Express	San Francisco Express	Pacific Limited	St. Louis Express	Tonopah Express	Sunset Manifest	Fast Mail	Colfax Sacramento Passenger	Placerville Sacramento Motor	The Sacramento	San Francisco Overland Limited	Ogden Manifest	Chico Sacramento Passenger	Local Freight	San Francisco Sacramento Passenger	Sparks San Francisco Passenger	California Express	Local Freight	Freight	Fresno Sacramento Passenger	Local Freight	San Francisco Sacramento Passenger
	STATIONS			Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily
Block Signals	TO-R **SAC.** PASS. STA.	Double Track	6.0	3.50AM	4.10AM	4.50AM	6.45AM	7.00AM		8.55AM	9.30AM	9.50AM	9.55AM	10.35AM		11.30AM		1.05PM	2.35PM	2.50PM			8.15PM		9.30PM
	1.0																								
	12TH STREET		5.0														12.15PM				4.20PM	5.00PM		9.00PM	
	2.0																								
	ELVAS		3.0	3.38AM	3.58AM	4.38AM	6.33AM	6.50	8.30AM	8.43AM	9.18AM	9.38	9.43	10.23AM	11.00AM	11.18AM	12.01PM	12.55	2.23PM	2.38PM	4.00	4.45PM	8.05	8.45PM	9.20
	3.0																								
	TO-R **BRIGHTON**		0.0					6.45AM	7.40AM			9.33AM	9.38AM		10.30AM		11.50AM	12.50PM			3.50PM		8.00PM		9.15PM
	(6.0)			Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Leave Daily

SACRAMENTO YARD—OUTBOUND, VIA ELVAS.

Trains moving from Sacramento to Elvas are Eastward and Elvas to Brighton Westward.

Time Table No. 118 January 28, 1923			Distance from San Francisco	16	10	264	65	24	285	253	222	31	14	2	62	34	63	58	22	230	20	6	257
				Oregon Express	Atlantic Express	Local Freight	Sacramento Fresno Passenger	Tonopah Express	Local Freight	Ogden Manifest	Portland Fast Freight	Stockton Sacramento Passenger	Portland Express	San Francisco Overland Limited	Sacramento Placerville Motor	Sacramento Colfax Passenger	The Sacramento	Sacramento Chico Passenger	St. Louis Express	Nevada MDSE.	Pacific Limited	Nevada Express	Sunset Manifest
	STATIONS			Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily
Block Signals	TO-R **SAC.** PASS. STA.	Double Track	88.8	12.30AM	1.30AM		7.00AM	7.30AM				8.50AM	1.10PM	2.35PM	3.00PM	3.45PM	4.10PM	4.35PM	4.40PM		9.35PM	10.15PM	
	1.0																						
	12TH STREET		89.8			6.30AM			7.40AM		8.40AM									7.15PM			
	2.0																						
	ELVAS		91.8	12.42AM	1.42AM	6.40	7.10	7.42AM	7.55	8.35AM	8.55AM	9.00	1.22PM	2.47PM	3.12	3.57PM	4.20	4.47PM	4.52PM	7.30PM	9.47PM	10.27PM	11.40PM
	3.0																						
	TO-R **BRIGHTON**		94.8			6.50AM	7.15AM		8.05AM	8.45AM		9.05AM			3.17PM		4.25PM						12.15AM
	(6.0)			Arrive Daily	Arrive Daily	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily

Time Table superiority of schedule trains and train orders of all trains apply to end of double track at Brighton.

EASTWARD					Time Table No. 118 January 28, 1923	WESTWARD		
Capacity of Sidings in car lengths.			Distance from San Francisco		**STATIONS**	Distance from Sheffield		
P			96.5	R	**GRACE**	15.3		
					0.4			
30			96.9		**MARCHANT**	14.9		
					1.5			
33			98.4		**MACKERT**	13.4		
					2.0			
39 W			100.4		**MADDOCK**	11.4		
					1.3			
33			101.7		**SEYMOUR**	10.1		
					3.4			
55 P			105.1		**SUBACO**	6.7		
					2.1			
33			107.2		**PELGER**	4.6		
					2.1			
55 P			109.3		**EVERGLADE**	2.5		
					1.9			
51			111.2		**HINSDALE**	0.6		
					0.6			
YP			111.8		**SHEFFIELD**	0.0		
					(15.3)			

.... Time over District ....
.... Average speed per hour ....

EASTWARD				Time Table No. 118 January 28, 1923	WESTWARD		
Capacity of Sidings in car lengths.			Distance from San Francisco	**STATIONS**	Distance from Karnak		
30			96.9	**MARCHANT**	2.8		
				1.0			
26			97.9	**ENSLEY**	1.8		
				1.8			
5			99.7	**KARNAK**	0.0		
				(2.8)			

.... Time over District ....
.... Average speed per hour ....

	EASTWARD FIRST CLASS				Time Table No. 118 January 28, 1923		WESTWARD SECOND CLASS		
Capacity of Sidings in car lengths.			600 Mixed Leave Daily Ex. Sunday	Distance from San Francisco	**STATIONS**	Distance from Stirling City	601 Mixed Arrive Daily Ex. Sunday		
Yard FYWBK			7.00AM	184.2	TO-R **CHICO**	31.2	s 1.20PM		
					2.4				
No Siding			f	186.6	**S. N. R. R. Crossing**	28.8	f		
					2.7				
				189.3	**DREDGE**	26.1			
					3.3				
18			f	192.6	**CROUCH**	22.8	s		
					4.0				
No Siding			f	196.6	**OAKDALE FARMS**	18.8	f		
					1.6				
21 W			s 7.55	198.2	**PARADISE**	17.2	s 12.05PM		
					1.4				
2 Spur			f	199.6	**OSTRANDER**	15.8	f		
					0.6				
2 Spur			f	200.2	**WAGSTAFF**	15.2	f		
					2.0				
3 Spur			f	202.2	**OPTIMO**	13.2	f		
					1.0				
12			s 8.15	203.2	**MAGALIA**	12.2	s 11.35AM		
					0.7				
7 Spur			f	203.9	**BUSH**	11.5	f		
					2.3				
3			s 8.30	206.2	**APPLETON**	9.2	s 11.15		
					0.9				
7 Spur			f	207.1	**LUCE**	8.3	f		
					2.9				
10 (Spur) W			s 8.50	210.0	**DOON**	5.4	s 10.55		
					5.4				
Yard Y			s 9.15AM	215.4	TO-R **STIRLING CITY**	0.0	10.25AM		
			Arrive Daily Ex. Sunday		(31.2)		Leave Daily Ex. Sunday		
			(2.15)		Time over District		(2.55)		
			13.15		Average speed per hour		10.69		

Westward trains are superior to trains of the same class in the opposite direction.

Emergency water supply, Stirling City. For main line trains see pages 6 and 7.

ADDITIONAL FLAG STOPS TO RECEIVE OR DISCHARGE PASSENGERS: Barber (Chico yard). Mile Post. 185.1.

RULE 2. The following are designated Watch Inspectors:

W. F. Hayes, General Time Inspector, 65 Market St.,	San Francisco
H. T. Harger, 1008 K St.	Sacramento
H. T. Harger	Roseville.
Geo. D. Davidson Company	Sparks.
O. W. Halstead	Oroville.
Leo J. Smith	Marysville.
J. R. Dupen	Chico.
E. W. Wright	Willows.
N. H. Burger	Placerville.

RULE 10 (G). Where there are two or more main tracks, an unattended red signal will not apply to the track on which a train is running if displayed beyond the first rail of an adjoining track.

RULE 72. When a section of double track is being used as single track under Form D-**S**, westward trains are superior to trains of the same class in the opposite direction.

RULE D-72 and 73. Trains between Elvas and Sacramento, and between Elvas and Brighton, and eastward trains via Elvas from Stockton Division to Roseville will move irrespective of superiority when moving with the current of traffic.

RULE 83 (B). At open train-order offices trains may register by ticket as follows: Nos. 11, 12, 53 and 54 at Woodland, Orland and Tehama.

Nos. 13, 14, 15 and 16 at Tehama.

First-class trains at Roseville Yard.

At the following stations, only the trains indicated will register:

Chico
Harrington
Dunnigan
Willows
Colfax
} Trains originating and terminating.

Sacramento, 12th St.—Trains originating and terminating and eastward freight trains from Western Division.

Roseville (Passenger Station).—First-class trains via Roseville-Gerber line.

Folsom.—Register at Junction Switch, Folsom. Trains that are required to go to Folsom or trains originating or terminating at Folsom, will on return to the Junction, register the same information as shown on register at station.

RULE 83 (D). Trains must obtain a clearance card before leaving Marysville, Colfax, Blue Canon and Truckee, also at Folsom when such station is an open train-order office. Extra trains not routed via Folsom need not go to Folsom Station or obtain a clearance card at that point.

Trains originating Twelfth Street, Sacramento, via Elvas-Brighton, proceed to Brighton without obtaining clearance card.

RULE 93. SACRAMENTO YARD.—Between a point 1,000 feet east of Benali to a point 4,000 feet west of Sacramento River Bridge, to a point 1,000 feet west of west switch at Brighton on Stockton Line via Elvas, to a point 1,000 feet east of east switch at Brighton on Placerville line via Homestead, to a point 3½ miles east of Junction switch, R Street, on Walnut Grove Line.

ROSEVILLE YARD.—Between a point 1,000 feet west of west switch Antelope, to a point one mile east of junction switch on Roseville-Gerber line, to a point 1,000 feet east of east switch at Rocklin, on track 4 and to a point 1,000 feet east of cross-over on Nos. 1 and 2 tracks.

MARYSVILLE YARD.—Between a point 1,000 feet west of Rupert Spur, to a point 1,000 feet east of W. P. R. R crossing at Binney Jct. to a point 4,100 feet east of Binney Jct. switch on Woodland-Oroville line, to a point 1,000 feet west of west switch of cannery track at Yuba City. This includes E and A Street cut-off.

GERBER (Shasta Div.).—Between a point 80 feet east of east switch to house track at Tehama and to a point on Shasta Division east of Gerber.

SPARKS (Salt Lake Div.)—Between a point one and one-half miles west of Reno and a point east of Sparks on Salt Lake Division.

YARD LIMITS.—Are defined by yard limit signs at the following stations:

Colfax, Woodland, Orland,
Truckee, Willows, Folsom.
Chico,

RULE D 97 (A). On double track trains may run extra moving with the current of traffic without running orders between Elvas and Brighton, Sacramento and B. C. Junction, Truckee and Sparks.

RULE 98. **DRAW-BRIDGES NOT INTERLOCKED**

Sacramento River at Knights Landing.
Sacramento River at Tehama.
Trains must not stop on draw-bridge at Knights Landing.

RULE D-151. On double track between Sparks and Truckee, trains will keep to the left. Signals used by trackmen will be placed on the left of the track in direction of movement.

RULE D-152. Does not apply between 15th Street and Sacramento River bridge, Sacramento, and between Roseville passenger station and cut-off at Roseville yard office.

RULE 221. That portion reading "Train-order office hours will be shown in the time-table" is cancelled.

When a train-order signal indicates proceed in both directions by day, and in addition the light indicates proceed by night, the office will be considered a closed train-order office.

RULE 516. Overlap posts are painted white at the top, black at the base and stand about six feet high. Overlaps are located at: Wyo.

RULE 876. Standing air brake tests must be made at:

Summit, Stirling City,
Blue Canon, Placerville.

RULE 887. Will not apply on heavy grades where necessary to work steam to water column. Helper engines coupled in middle or rear of train must be detached from the forward portion of train before taking water.

AUTOMATIC BLOCK SYSTEM

When signals 889 and 901, in Sacramento yard, indicate "stop," trains will not proceed until signal indicates "proceed" or hand signals are given by switch-tender. In foggy or stormy weather, flagman must precede train when signal indicates "stop."

Three-arm automatic block signal on No. 2 track at junction switch, Rocklin, governs the movement of eastward trains. The upper home and distant signal govern the use of No. 2 track. The lower home signal will clear only when No. 4 track is clear and switch lined for movement to Loomis on No. 4 track.

On No. 1 track between Newcastle and Loomis, automatic block signal rules governing trains on single track will apply.

When trains are stopped by automatic block signals No. 1158 west of Lincoln, No. 1170 east of Lincoln, No. 1280 west of Wheatland or No. 1291 east of Wheatland, stop, then proceed with caution not exceeding six miles per hour to signal governing opposite direction.

Distant signals only are operated at Whitney, Ewing, Sheridan, Ostrom, Marysville and Yuba City; these signals indicate caution when switch is open or a train occupies main track between signal and switch.

INTERLOCKING

SACRAMENTO RIVER BRIDGE.—The home signal at the west end of bridge governing movement of eastward trains will display normal indication "stop" and will be cleared on approach of eastward trains when circuit is clear. The home signal on the east end of bridge will display normal indication "proceed." This interlocking plant is for protection of drawbridge and not for railroad crossing which is located at the east end of bridge.

Limits extend from home and dwarf signals 350 feet west of bridge to home and dwarf signals 200 feet east of bridge.

NINETEENTH STREET, SACRAMENTO.—At crossing of R Street track with Western Pacific R. R.

Trains wishing to use industry or transfer tracks will give one long, one short and one long rings on push button located on home signal cases.

Limits extend from home signal 400 feet west of tower to home signal 700 feet east of tower.

HOMESTEAD.—At crossing of R Street line with Sacramento Northern R. R.

Trains wishing to use stock corral track or east end of Pacific Gas & Electric Company siding, will give one long, one short and one long rings on push button.

Libby McNeill siding, one long and one short rings.

Main track, one ring.

Limits extend from home signal 950 feet west of Sacramento Northern R. R., crossing to home signal 700 feet east of crossing.

ELVAS—Trains from Sacramento to Brighton will be governed by lower and trains from Sacramento to Roseville by upper signal. From Roseville to Sacramento by upper, from Roseville to Brighton by lower signal. From Brighton to Sacramento by upper, from Brighton to Roseville by lower signal.

Last paragraph Rule 628 is amended permitting towerman at Elvas to give signals from tower instead of on the ground.

Whistle signal governing routes as follows:

To Roseville, one long and one short, ——— o.
To Sacramento, three long and one short, ——— ——— ——— o.
To Brighton, two long and three short, ——— ——— o o o.
To siding, three short and two long, o o o ——— ———.
To third track, two short, two long, o o ——— ———.
To spur, one short, two long, o ——— ———.

Limits on Sacramento-Roseville line extend from home signal 1400 feet west of tower to home signal 900 feet east of tower. On Elvas-Brighton line extends to home signal opposite automatic signal 1357 on eastward track and to dwarf signal 400 feet east of signal 1357 on westward track.

SNODGRASS SLOUGH.—Draw-bridge located approximately two miles west of Walnut Grove, on Walnut Grove line, interlocked.

When signal indicates "stop," trains must not move over draw-bridge until flagman has preceded the train and ascertained that bridge is closed and track safe.

NINTH STREET TOWER, MARYSVILLE.—Crossing Western Pacific R. R. and Woodland-Oroville line.

Limits extend from a point 450 feet west of tower to a point 450 feet east of tower.

BINNEY JUNCTION TOWER.—Junction with Woodland-Oroville line and crossing Western Pacific R. R. Whistle signals governing routes as follows:

Main Track to or from Gerber, one long, one short ——— o.
Main Track to or from Oroville, two short, two long, o o ——— ———.
Siding to or from Gerber, one short, three long, o ——— ——— ———.
Siding to or from Oroville, three long, one short, ——— ——— ——— o.
Siding to or from west leg of wye, three short, two long, o o o ——— ———.
Main Track to or from west leg of wye, two long, three short, ——— ——— o o o.
Main Track to or from east leg of wye, one short, one long, one short, one long, o ——— o ———.
To Spur, one short, two long, o ——— ———.

Limits on Roseville-Gerber line extend from signal bridge 1300 feet west of tower to home signal 500 feet east of tower. On Oroville line extend from signal bridge to home signal 950 feet east.

LIVE OAK TOWER.—Crossing Sacramento Northern R. R. one half mile east of Live Oak. Eastward trains, when standing on main track to meet trains at Live Oak, will stop west of east house track switch to avoid holding interlocking signal against such trains.

Limits extend from home signal 500 feet west of tower to home signal 400 feet east of tower.

WOODLAND.—Crossing Sacramento Northern R. R.

Whistle signals governing routes as follows:

For Tehama to or from siding, one long, one short, ——— o.
For Tehama to or from house track, three long, one short, ——— ——— ——— o.
For Knights Landing to or from siding, one short, three long, o ——— ——— ———.

Limits on Davis-Tehama line extend from home signal 450 feet west of Sacramento-Northern R. R. crossing to home signal 500 feet east of crossing. On Knights Landing line extends to dwarf signal 200 feet east of crossing.

SPECIAL INSTRUCTIONS

SPECIAL SIGNALS

Disc signals located 2,000 feet west of west switch at Midas and 2,000 feet east of east switch at Gold Run and on signal mast 1530 near west switch Gold Run and at west switch Colfax, controlled by operators, will govern movement of trains as follows:

When showing yellow disc or yellow light; take siding.

When showing white disc or green light; proceed, if train orders or schedule permits.

Light signal on mast of signal 1435 east of Colfax, controlled by operators.—Indications are given by illuminated letters and figures as follows:

M—Hold Main Track.
X—Enter Siding at Cross-over.
1—Take No. 1 Track at East Switch.
2—Take No. 2 Siding at East Switch.
No light—Proceed, if train orders or schedule permits.

Junction switch located 150 feet east of S. P. R. R. crossing at Brighton, on Sacramento-Placerville line, will be lined for movement via Elvas. The upper arm of signal 947 governs movement to Elvas, the lower arms governs movement to R Street.

Junction switch at Tehama will be normally lined for movement via Chico, upper arm signal 2119 will govern Gerber-Roseville line; lower arm will govern Tehama-Davis line.

Normal indication of signal 2118 will be "proceed;" normal indication of signal 2116 will be "stop."

Trains from Tehama-Davis line will not pass Signal 2116 until junction switch is lined for Tehama-Davis line and will then be governed by Rule 509.

SPEED RESTRICTIONS

Speed of passenger trains must not exceed 50 miles per hour.

Speed of freight or mixed trains must not exceed 35 miles per hour.

Trains must not exceed the speed in miles per hour as shown below. This does not authorize exceeding other speed restrictions specified:

Pages	Between	Passenger	Freight or Mixed	Engines and Motor Cars Backing	Motors Backing thru yards and over Highway Crossings
2-3	Sacramento—Elvas........	15	15	15	10
2-3	Elvas—Roseville..........	50	35	20	10
2	Roseville to Colfax........	40	25	20	10
2	Colfax to Blue Canon (No. 2 Track..................	35	25	15	10
3	Blue Canon to Loomis (No. 1 Track.................	35	25	15	10
3	Loomis to Roseville (No. 1 Track..................	50	25	20	10
4-5	Blue Canon—Truckee.....	30	25	15	10
4	Truckee to Sparks.........	40	25	15	10
5	Sparks to Truckee (No. 1 Track).................	40	25	20	10
6-7	Roseville—Gerber.........	50	35	20	10
8-9	Davis—Tehama...........	50	35	20	10
10	Woodland—Grace.........	35	30	20	10
10	Grace—Marysville........	30	25	15	10
10	Marysville—Oroville......	35	25	20	10
10	Harrington—Wyo.........	35	25	20	10
10	Willows—Fruto...........	20	15	12	10
11	Brighton—Folsom.........	50	35	20	10
11	Folsom—Placerville.......	30	15	12	10
11	Sacramento—Walnut Grove	30	20	15	10
12	Grace—Sheffield..........	30	20	15	10
12	Chico and M.P. 188 {Stirling CityBr.}	30	25	20	10
12	M. P. 188 and Stirling City	15	12	12	10

Speed of trains regulated by ordinance through city limits:

15 Miles Per Hour

Sacramento
Rocklin
Lincoln
Wheatland
Gridley
Corning
Orland
Willows

On curves of 6 degrees trains must not exceed 30 miles per hour and on curves of 7 to 10 degrees 25 miles per hour.

Mallet Mogul engines 4200 to 4211 inclusive, consolidation, mikado and 2-10-2 type engines must not exceed 40 miles per hour.

Mallet consolidation engines must not exceed 25 miles per hour on tangent and 20 miles per hour on curves.

Trains with Mallet engines must not exceed 8 miles per hour and trains with other classes of engines 15 miles per hour when using cross-overs, turn-outs and on sidings, and run with caution through interlocking plants.

Relief trains with steam derricks must not exceed 25 miles per hour and will be governed by other speed restrictions.

Flangers operating between Lawton and Colfax must not exceed 30 miles per hour and be governed by other speed restrictions.

SACRAMENTO-ROSEVILLE

Trains and engines must not exceed 15 miles per hour through Elvas interlocking plant.

Trains and engines must not exceed 12 miles per hour over crossing just east of Sacramento River Bridge and over Lincoln Street crossing, Roseville.

ROSEVILLE-BLUE CANON

Westward trains must not exceed 12 miles per hour over cross-over at B. C. Junction.

Trains must not exceed 20 miles per hour over Long Ravine bridges east of Colfax on Nos. 1 and 2 tracks.

Westward freight trains must not exceed 15 miles per hour when passing eastward passenger trains on parallel track between Blue Canon and Long Ravine bridge.

BLUE CANON-SPARKS

Trains must not exceed 12 miles per hour over siding Tunnel Six.

Trains must not exceed 15 miles per hour over bridges 1st, 2nd, 3rd and 4th crossings Truckee River on No. 2 track.

Engines must not exceed 12 miles per hour on balloon track at Truckee.

Eastward trains must not exceed 12 miles per hour between west switch and yard office at Sparks.

ROSEVILLE-GERBER

Trains must not exceed 25 miles per hour over Feather River bridge east of Binney Junction. This includes approaches as well as trestle on the curve just east of Feather River.

DAVIS-TEHAMA

Trains must not exceed 12 miles per hour over Court Street crossing, Woodland.

WOODLAND-OROVILLE

Trains must not exceed 12 miles per hour over Long Trestle east of Knights Landing.

Trains must not exceed 12 miles per hour over railroad crossing Second Street west of Yuba City station.

SACRAMENTO-PLACERVILLE

Motor cars must not exceed 25 miles per hour between Mile Post 138 and Placerville.

Trains having cars loaded with ore or high loads of lumber must not exceed 12 miles per hour on curves 7 degrees or over.

CHICO-STIRLING CITY

Engines must not exceed 12 miles per hour on balloon track Stirling City.

SPEED TABLE

Miles per Hour	1 Mile in		Miles per Hour	1 Mile in		Miles per Hour	1 Mile in		Miles per Hour	1 Mile in	
	Min.	Sec.		Min.	Sec.		Min.	Sec.		Min.	Sec.
6	10	......	21	2	51	31	1	56	41	1	27
8	7	30	22	2	43	32	1	52	42	1	25
10	6	......	23	2	36	33	1	49	43	1	23
12	5	......	24	2	30	34	1	45	44	1	21
15	4	......	25	2	24	35	1	42	45	1	20
16	3	45	26	2	18	36	1	40	46	1	18
17	3	31	27	2	13	37	1	37	47	1	16
18	3	20	28	2	8	38	1	34	48	1	15
19	3	9	29	2	4	39	1	33	49	1	13
20	3	......	30	2	......	40	1	30	50	1	12

MAXIMUM SPEED FOR WHICH ENGINES ARE COUNTERBALANCED

All engines, with the following exceptions, are counterbalanced for a speed in miles per hour equal to the number of inches in diameter of driving wheels:

Class of Engine	Engine Numbers	Maximum Speed in Miles per Hour	Maximum Wheel Pressure
A-1.................	3000 to 3009.....................	63	45120 lbs.
MC-1................	4000 to 4001.....................	53	42760 lbs.
MC-2................	4002 to 4016.....................	53	42760 lbs.
MC-4................	4017 to 4028.....................	53	43130 lbs.
MC-6................	4029 to 4043.....................	53	43230 lbs.
MC-6................	4044 to 4048.....................	53	42680 lbs.
MK-2................	3200 to 3202, 3205, 3206, 3210, 3211	49	46140 lbs.
MK-4................	3216 to 3230, 3232 to 3235........	49	45560 lbs.
MM-2................	4200 to 4211.....................	56	46300 lbs.
T-6.................	2187, 2190, 2194, 2200, 2203, 2204, 2205..........................	50	22740 "
T-6.................	2197, 2208.......................	45	24110 "
T-28................	2311 to 2314, 2316, 2317, 2320, 2323, 2325, 2327, 2328, 2330, 2342, 2343, 2352..................	54	46220 "
TW-2................	2946, 2948 to 2953...............	43	25860 "
TW-4................	2926 to 2931.....................	44	26000

Note.—Maximum speed in miles per hour is based on vertical disturbing force of counterbalance not exceeding 75% of static wheel load, and maximum wheel pressures shown obtain at speeds indicated.

The above table is for information of enginemen and must not be construed to authorize exceeding speed restrictions.

MISCELLANEOUS

1. All available retainers on passenger and freight trains will be used as follows:

Eastward trains, Summit to Truckee.

Westward trains {Summit to Long Ravine Bridge.
New England Mills to Loomis.
Stirling City to M. P. 188.}

3. ON PASSENGER TRAINS, after stopping, trainmen will turn down retainers, one man working from head end, another from the rear, until they meet; then immediately turning them up on return movement.

Engineman will release the air brakes as soon as stop is made.

When all retainers have been turned down, rear brakeman will notify the engineman by one blast of the signal whistle.

4. Freight trains and light engines on descending grade will make a stop of ten minutes at the following stations to permit wheels to cool, trainmen will make a careful inspection of all cars, and engineman inspect engine.

Floriston.
Andover (except when eastward trains stop at Eder, will inspect at Eder instead of Andover).
Summit.
Spruce.
Crystal Lake (except when westward trains stop at Cisco, will inspect at Cisco instead of Crystal Lake).
Midas.
Gold Run.
Colfax.
Flint (except westward freight trains which stop and take siding at Auburn, will inspect at Auburn instead of Flint).
Latrobe.
Paradise.
Doon.
Crouch.

Passenger trains stop at Paradise 5 minutes to cool wheels.

5. Eastward freight trains stop at Summit or Tunnel Six, westward freight trains stop at Lake View. After stopping, engineman will make a service brake pipe reduction of 15 pounds, lapping the brake valve, then call for the plug, after receiving same, charge brake pipe to maximum pressure, then proceed.

6. After standing air brake, rear end test is made by eastward freight trains, trainmen will watch trains out of Summit or Tunnel Six.

7. Air plugs must be used on all freight trains between Sparks and Roseville. These plugs will be handled by carmen at Sparks and Roseville; but must be applied and removed when necessary by trainmen at intermediate stations.

STAFF RULES

11. The Train Staff system is in operation between Truckee and B. C. Junction. All stations with sidings within these limits are train staff stations.

12. Two disc signals, upper pertaining to the occupancy of the main track, and lower pertaining to the staff for the next block, are placed on one mast at each end of siding at staff stations except the following:

Donner,
Stanford,
Tunnel Six,
Summit,
Soda Springs,
Troy,
Cisco,
Crystal Lake,
Gunter,

where signal indications are given by light signals.

If upper signal shows red disc and red light, and lower signal shows yellow disc and yellow light, train must take siding.

If upper signal shows white disc and green light and lower signal shows yellow disc and yellow light, train must proceed with caution, on main track, prepared to stop at staff crane.

If both signals show white discs and green lights, train must proceed on main track expecting to receive staff.

SPECIAL SIGNALS GOVERNING TUNNEL SIX ARE AS FOLLOWS:

13. Westward double home signal 200 feet east of east portal of Tunnel 6.

Upper light red and lower light red:—Stop and stay until signal indicates proceed. If delayed use telephone.

Upper light green, lower light red:—Proceed, switch lined for main track and Tunnel Six-Summit main track staff in crane on left side of main track.

Upper light red, lower light green:—Proceed, switch lined for siding and Tunnel Six siding staff in crane on right hand side of siding opposite office.

If only one light or no light is shown, stop and telephone Tunnel Six for instructions. Telephone located 50 feet west of signal on opposite side of track.

Switch handled by Tunnel Six staff operator.

14. Eastward home signal 300 feet west of Tunnel Six staff crane, on right-hand side of main track.

Red:—Stop. If delayed send a member of crew to staff office for instructions.
Yellow:—Proceed to staff crane.
Green:—Proceed.

MISCELLANEOUS—Continued.

STAFF RULES

15. Eastward home signal 300 feet west of Tunnel Six staff crane, on right of siding.

Red:—Stop. If delayed send a member of crew to staff office for instructions.

Yellow:—Proceed with caution to staff crane.

Green:—Proceed.

16. When westward trains are put on siding at Tunnel Six, helper engines of freight trains will cut out on run-around track (on north side) at east end of Tunnel Six siding, and helpers of passenger trains will cut out at "Siding Staff Limit" sign, or when required to hold main track, eastward and westward trains will cut out helpers between Summit and Tunnel Six.

17. Trains must not occupy main track or siding between Summit and Tunnel Six without their respective staffs, and must not use cross-overs within the limits of the siding staff without staffs for both tracks.

18. Westward trains on Tunnel Six siding will stop at sign reading "Siding Staff Limit" east of cross-over switches, leaving cross-overs clear for fire train movements, and must not enter Summit siding without permission from Summit staff operator.

19. Eastward trains approaching Tunnel Six on main track or siding receiving yellow light at home signal will stop at clearance west of staff cranes and after receiving proper staff for Tunnel Six-Lake View block, will not proceed beyond that point without calling for and receiving proceed signal (green light) located on staff crane, which is an indication that the switch is properly lined for the movement.

20. Eastward passenger trains cutting helper at Tunnel Six, will stop road engine west of track circuit at staff crane to permit operation of switch. Helper engine will then pull down 35 feet east of east switch and call for signal by sounding four short sounds of steam whistle and will back up only upon receiving proceed signal (green light) at that point. Acknowledge receipt of signal by sounding two short sounds of steam whistle.

21. After completion of inspection and cutting helper, when ready to proceed, eastward trains will sound four short sounds of steam whistle. Operator upon receipt of this signal will give proceed signal (green light) located on staff crane. On receipt of this signal engineman must acknowledge receipt of same by sounding two short sounds of steam whistle.

22. Helpers pushing freight trains from Summit to Tunnel Six will follow train to Tunnel Six and procure staff for return movement.

SPECIAL SIGNALS GOVERNING SUMMIT ARE AS FOLLOWS:

23. Westward home signal at clearance of fire train spur indicates as follows, after main track cross-over switch is thrown:

Yellow:—Staff not in crane. Until signal indicates proceed, or Summit-Soda Springs staff is procured, trains will stay east of fire train spur, if delayed send a member of crew to staff office immediately.

Green:—Proceed on main track.

24. Eastward home signal located at West switch Summit:

Red:—Take siding.

Yellow:—Proceed to signal located 200 feet west of Summit Station.

Green:—Proceed.

In the absence of light in home signal, stop and telephone to Summit office for instructions. Telephone located at derail.

25. Eastward signal located 200 feet west of Summit Station.

Red:—Take siding.

Yellow:—Proceed to staff crane.

Green:—Proceed.

26. When eastward trains are put on siding at west switch Summit, the helper of freight trains will cut out at the run-around track at west end of siding, and passenger train helpers will cut out at turn-table switch.

27. Both switches of second cross-over east of Summit office will be normally lined for cross-over movement between main track and siding.

28. Trains carrying passengers will not head in on west end Tunnel Six siding until train to be met has stopped.

All other staff rules govern.

SACRAMENTO—ROSEVILLE—BRIGHTON

41. Tracks between Sacramento and Roseville numbered as follows:

No. 1 Track, Westward main track

No. 2 Track, Eastward main track.

42. Westward trains via Brighton having cars to set out at Elvas will use east end of center siding using switch at road crossing.

43. Eastward trains from Brighton having cars to set out at Elvas will use west end of center siding and set cars in at switch near road crossing.

44. Trains and yard engines after stopping for crossing with Sacramento Northern R.R. at Front and M Streets, Sacramento, will proceed only on signal from flagman.

45. Southern Pacific trains will approach Western Pacific R.R. crossing at Front and R Streets, Sacramento, with caution, expecting to find crossing occupied. Southern Pacific yard engines will stop and ascertain that crossing is clear before proceeding.

46. Southern Pacific and Western Pacific trains and yard engines must ascertain that all switch and industry track crossings in the vicinity of Front and R Streets are clear before using.

47. Trains and yard engines must not pass the switch tenders stations at east end Sacramento River Bridge, Fourth Street, Sixth Street and Fifteenth Street, Sacramento, without receiving a signal to proceed.

48. Trains will stop within two hundred feet of Sacramento Northern R. R. crossing Front and R Streets Sacramento before crossing.

ROSEVILLE-BLUE CANON

51. Tracks between Roseville and B. C. Junction numbered as follows:

No. 1 Track, Westward main track via Auburn.

No. 2 Track, Eastward main track via Auburn, Nevada Street.

No. 4 Track, between Rocklin and Loomis; diverges from No. 2 track at Rocklin and runs on south side of No. 1 track, one-half mile east of Rocklin to Loomis, connecting with No. 1 track at Loomis.

52. Markers must be kept lighted on No. 2 track between Rocklin and Colfax at all hours. Trainmen in this district must turn markers at all hours, as per Rule 19, Book of Rules.

53. No. 1 track east yard Colfax will be used as siding and tracks Nos. 2 and 3 east yard as storage tracks. Old rip track will be connected with west leg of wye and used as wye.

54. On eastward trains from Roseville for the mountain, ten empties must be placed immediately behind head engine; this to apply when trains are made up of mixed loads and empties. Also, it must be distinctly understood that all trains for the mountain be made up with steel underframe cars between head engine and pusher engines; this to include Colfax set out. Steel frame cars for Colfax must be placed immediately behind head engine, and wooden frame cars for Colfax will be placed next to the caboose.

55. Engines on eastward freight trains from Roseville via Colfax will be placed as follows:

When two mallets, one on head end, helper engine 13 cars ahead of caboose, if wooden frame cars will permit.

When two mallets in one train, and additional consolidation engine helper from Colfax, it will be placed on head end.

2-10-2 type engines must not be used as leading engine on freight trains except in cases of emergency.

56. Crews of light engines moving west, with instructions to deliver engines to roundhouse at Colfax, in making movement through cross-over east of passenger station to the round-house lead switch, may do so without complying with Rule D-152 and without protecting against current of traffic, except when on the time of a first-class eastward train or during foggy or stormy weather, in which case proper protection must be provided.

Eastward trains, except first-class, must stop before fouling the switch of roundhouse lead connecting with the eastward main track, and before proceeding, must know that the track to the cross-over east of the passenger station is clear.

57. When necessary for eastward freight trains to double to Cape Horn, rear of train will be properly secured, and head of train taken to Cape Horn and properly secured on siding beyond derail; engine will then return for rear of train in usual manner.

58. The tonnage of freight trains between Blue Canon and Loomis, must not exceed 100 M's per operative brake.

BLUE CANON—SPARKS

62. Markers must be kept lighted between B. C. Junction and Truckee at all hours. Trainmen in this district must turn markers at all hours, as per Rule 19, Book of Rules.

63. Between Emigrant Gap and Andover the snowshed posts on each side of the track are numbered for a distance on either side of sidings showing number of car lengths from the switch. This is a guide for engineman in locating switch in pulling out of siding.

64. Passenger equipment trains of fourteen cars or over within snowshed district will, when necessary to take siding, pull into siding and stop, and pull out of siding and stop, in order to pick up brakeman.

65. Normal position of main track switch at west end of double track at Truckee will be for westward trains. Normal position of switches leading from single to double track at B. C. Junction, will be for westward trains.

66. When trains have outfit cars, helper engine will go through to Lake View, instead of cutting out at Summit, to avoid shoving against outfit cars while helping train out of Summit.

67. The tonnage of freight trains between Summit and Blue Canon must not exceed 100 M's per operative brake, between Summit and Truckee 120 M's per operative brake.

68. Engines must be cut from westward freight trains while taking oil at Truckee.

69. Mallet Engines will not be operated over the following switches:

Spur switch, Eder.

Lumber spur switch, Summit.

Spur switch, Spruce.

Outfit spur switch, off siding, Cisco.

Spur switches, Yuba Pass.

Lumber spur switches, off siding, Fulda.

The following spurs may be used only part way by Mallet engines, such distance in each case being shown below:

Andover, outfit spur, 3 car lengths back of frog.

Lake View, 6 car lengths back of frog.

Soda Springs, to corral chute.

Campbell Spur, Cisco, to corral chute.

70. Air plugs must be used on all freight trains between Sparks and Roseville. These plugs will be handled by carmen at Sparks and Roseville but must be applied and removed when necessary by trainmen at intermediate stations.

MINIMUM CLEARANCES FOR ROTARY PLOWS, BLUE CANON EAST

71. Push cars in shed district must be placed between posts providing for proper clearance.

Cisco, old fire train spur, shed post clears 8 inches. Tunnels 3 and 4, 8 to 10 inches clearance.

Tunnel 5, 8 inches clearance.

East and west of mile post 195, stone walls clear 6 inches. Water trough east of tunnel 10 clears 5 inches.

East end of tunnel 11 clears 8 inches. When staff in staff crane will not clear plow, stop and get staff by hand.

Rotary plow on an 8 or 10 degree curve will swing approximately 7 inches from center.

All crews handling plows through district where standard clearance is not provided must reduce speed to six miles per hour through tunnels and at rock walls.

ROSEVILLE-GERBER

76. Trains on the Roseville-Gerber line when calling in flagman from the east at Roseville, will give six long sounds of the whistle.

77. West end of Nelson siding, between cross-over just east of station building and extreme west switch, will be occupied by cars for commercial loading.

78. Oil trains in valley district will be made up with ten steel frame empty cars immediately behind engine, loaded oil cars to follow; to be made up in this manner when consist of mixed loads and empties.

79. Trains must pass over S. N. R. R. crossing 9th Street Chico with caution.

DAVIS-TEHAMA

81. Trains when calling in flagman from the west on west side of valley Tehama, will give six long sounds of the whistle.

82. Trains when calling in flagman from the east at Davis, on Davis-Tehama Line, will give six long sounds of the whistle.

84. Siding at Harrington will be used as follows: "West end west of cross-over as eastward siding; East end east of cross-over as westward siding. West switch of westward siding will be junction switch to Colusa line. Rule 98 will apply at this point.

85. Track 2 of the two tracks paralleling the main track at Wyo will be used as siding. All cars to be stored at this point should be placed on Track 1 with east and west ends providing proper clearance for clear movement through Track 2.

MISCELLANEOUS—Continued.

CHICO-STIRLING CITY

89. Cars will not be handled ahead of engine at any point between Stirling City and Chico on westward trip.

90. Two engines must not be coupled together on Stirling City line. Helper engines must be cut back in train.

91. The tonnage of freight trains between Stirling City and Chico must not exceed 80 M's per operative brake.

92. Trains will stop within two hundred feet of Sacramento Northern R. R. crossing on Chico-Stirling City line before crossing.

WOODLAND-OROVILLE

94. Trains to and from Woodland-Oroville line will use Woodland siding but **have no time-table authority. Switches of this siding will be set to lead from Knights Landing** line.

95. Trains must stop within two hundred feet of Sacramento Northern R. R. crossing at Yuba City, and Knights Landing draw-bridge before crossing.

96. Trains when calling in flagman from Swayne Lumber Co. logging road at Oroville, will give six long sounds of the whistle.

97. Trains will pass over S. P. R. R. crossing at Grace with caution.

SACRAMENTO-PLACERVILLE

100. The tonnage of freight trains between Placerville and Folsom must not exceed 100 M's per operative brake.

101. Trains when calling in flagman from the east at Brighton on Sacramento-Placerville line will give six long sounds of the whistle.

LIST OF SURGEONS.

NAME	LOCATION	DISTRICT
Dr. F. K. Ainsworth, Chief Surgeon	San Francisco	
Dr. A. M. Henderson, Division Surgeon	Sacramento	Special Service.
Dr. G. L. Stevenson, District Surgeon	Sacramento	Between Sacramento, Roseville and Citrus.
Dr. W. E. Briggs, Oculist and Aurist	Sacramento	
Dr. B. Woodbridge, District Surgeon	Roseville	Between Antelope, Whitney and Rocklin.
Dr. J. L. Fanning, Asst. District Surgeon	Roseville	Between Antelope and Rocklin.
Dr. H. D. Fletcher, District Surgeon	Rocklin	Between Roseville and Loomis.
Dr. O. L. Barton District Surgeon	Loomis	Between Rocklin and Penryn.
Dr. H. N. Miner, District Surgeon	Blue Canon	
Dr. L. B. Barnes, District Surgeon	Newcastle	Between Penryn and Auburn.
Dr. B. F. Howard, Emergency Surgeon	Alta	
Dr. G. H. Fay, District Surgeon	Auburn	Between Newcastle and N. E. Mills.
Dr. Jno. W. Nielsen, District Surgeon	Colfax	Between N. E. Mills and Gold Run.
Dr. R. Heidrich, District Surgeon	Dutch Flat	Between Gold Run and Cisco.
Dr. J. H. Bernard, District Surgeon	Truckee	Between Cisco and Boca.
Dr. C. E. Edwords, Assistant District Surgeon	Truckee	
Dr. W. H. Hood, District Surgeon	Reno	Between Floriston and Sparks.
Dr. A. J. Hood, Assistant District Surgeon	Reno	
Dr. John A. Fuller, Oculist and Aurist	Reno	
Dr. F. E. McCullough, District Surgeon	Lincoln	Between Whitney and Sheridan
Dr. E. E. Grey, District Surgeon	Marysville	
Dr. I. W. Higgins, District Surgeon	Live Oak	
Dr. L. Q Thompson. Dr. W. G. Levy } District Surgeons	Gridley	Between Live Oak and Nelson.
Dr. O. C. Hawkins, Emergency Surgeon	Biggs	
Dr. O. Stansbury, District Surgeon	Chico	Between Nelson and Vina.
Dr. N. T. Enloe, Associate District Surgeon	Chico	
Dr. J. H. Belyea, District Surgeon	Los Molinos	Between Proberta, Vina and Richfield
Dr. F. J. Bailey, District Surgeon	Gerber	Between Red Bluff and Gerber.
Dr. W. E. Bates, District Surgeon	Davis	Between Davis and Merritt.
Dr. H. D. Lawhead, District Surgeon	Woodland	Between Merritt, Chandler and Dunnigan.
Dr. H. S. Powers	Arbuckle	
Dr. Ney M. Salter, District Surgeon	Williams	
Drs. W. T. Rathbun and C. O. Poage Emergency Surgeons	Colusa	
Dr. C. W. Lund, District Surgeon	Willows	Between Cortena, Artois and Fruto
Dr. S. Iglick, District Surgeon	Orland	Between Artois and Kirkwood.
Dr. B. C. Epperson, District Surgeon	Stirling City	
Dr. F. E. McCann, District Surgeon	Corning	Between Kirkwood and Richfield.
Dr. T. B. Reardan, District Surgeon	Oroville	Between Honcut and Oroville.
Dr. S. McMullin, District Surgeon	Folsom	Between Fair Oaks and Latrobe.
Dr. W. A. Reckers, District Surgeon	Placerville	Between Latrobe and Placerville.
Dr. Geo. W. Harvey, District Surgeon	Paradise	Stirling City Branch.
Dr. Mary B. Poket, Emergency Surgeon	Hamilton	Colusa Branch.

NOTE.—Emergency Surgeons should only be summoned for temporary treatment when prompt attention is required and when patients cannot be sent to or await arrival of Division or District Surgeon. Emergency Hospitals located at Truckee, Sparks and Sacramento.

AVERAGE WEIGHT OF PASSENGER TRAIN CARS

KIND OF CAR	AVERAGE WTS.—POUNDS		
	Wood	Steel	Steel Underframe
Baggage	75,000	91,000	....
Baggage (Dynamo)	....	101,000	....
Baggage and Mail 60′	....	97,000	92,000
Baggage and Mail 69′	75,000	122,000	....
Baggage and Passenger	65,000	....	....
Buffet	....	131,000	122,000
Buffet (Dynamo)	....	146,000	....
Business	108,000	179,000	136,000
Chair	84,000	98,000	
Coaches	75,000	95,000	
Dining	131,000	146,000	138,000
Express, Horse	79,000	....	....
Express, Refr. (Am. Ry. Exp.) #40 to 154	....	....	78,000
" " " " " #155 to 224	....	....	89,000
" " " " " #500 to 506	....	....	110,000
" " " " " #1101 to 1175	....	....	85,000
" " (GN RR)	70,000	....	....
" " (NP RR)	60,000	....	74,000
Observation	122,000	144,000	128,000
Postal 40′	....	72,000	....
Postal 60′	....	111,000	....
Pullman Observation	124,000	148,000	142,000
" Parlor	115,000	149,000	142,000
" Standard Sleeper	125,000	152,000	145,000
" Tourist	94,000	....	133,000
Tea and Silk	48,000	....	....

LOCATION OF OVERHEAD AND SIDE STRUCTURES NOT STANDARD CLEARANCE

Mile Post	LOCATION	DESCRIPTION
	SACRAMENTO YARD	
	Shop Yard	Oil House West of Store No. 1 ... Side
	Shop Yard	Platform Store No. 1 ... Side
	Shop Yard	Sand spurs Nos. 1 and 2 ... Overhead
	Front & J Sts	Miller & Enwright spur ... Side
	Front, L & M Sts	A. S. Hopkins spur ... Side
	Front, L & M Sts	John Breuner & Co. spur ... Side
	Front & I Sts	Machinery spur ... Side
	Front, I & M Sts	Freight House track No. 1 ... Side
	Front, I & M Sts	Freight House track No. 2 ... Side
	Front, I & M Sts	Freight House track No. 3 ... Side
	Front & H Sts	Jail spur ... Overhead
	Front & I Sts	Water Works spur ... Overhead
	R between 11th & 12th	Lawrence Warehouse ... Side
	R between 20th & 21st	Sacramento Valley Winery spur ... Side
	R between 21st & 22nd	Barley spur Buffalo Brewery ... Side
	R between 21st & 22nd	California Winery spur ... Side
	B between 11th & 12th	Phoenix Mill spur ... Side
	B between 8th & 9th	Consumers Ice Co. Track ... Side
	3rd to 6th Sts	Track No. 4 Rolling Mill ... Side
	6th Street	Water Tank ... Side
	Train Shed	Tracks Nos. 1, 2, & 3 ... Overhead
	SACRAMENTO-SPARKS—EASTWARD.	
94.9	Ben Ali	Cannon Phillips spur ... Overhead & Side
106.6	Roseville	Icing track, PFE track No. 2 and New Icing track, PFE Plant ... Side
106.6	Roseville	Car bodies & Lbr. on rip track ... Side
110.6	Rocklin	Cal. Granite spur, Rocklin, Quar ... Side
110.6	Rocklin	Stock Chute on Corral Track ... Side
	E. of Rocklin	Antelope Creek bridge ... Side
114.2	E. of Rocklin	Tunnel No. 15 ... Overhead
114.8	E. of Rocklin	Tunnel No. 16 ... Overhead
117.3	E. of Lincoln Ave., Penryn	Tunnel No. 17 ... Overhead
120.5	E. of Newcastle	Tunnel No. 18 ... Side & Overhead
122.7	E. of Newcastle	Tunnel No. 19 ... Overhead
123.2	E. of Newcastle	Tunnel No. 20 ... Overhead
124.7	E. of Nev. St., Auburn	Tunnel No. 21 ... Overhead
131.2	E. of Bowman	Tunnel No. 22 ... Overhead
132.7	E. of Clipper Gap	Tunnel No. 23 ... Overhead
132.9	E. of Clipper Gap	Tunnel No. 24 ... Overhead
133.1	E. of Clipper Gap	Tunnel No. 25 ... Overhead
133.3	E. of Clipper Gap	Tunnel No. 26 ... Overhead
133.8	E. of Clipper Gap	Tunnel No. 27 ... Overhead
134.8	E. of Applegate	Tunnel No. 28 ... Overhead
136.0	E. of Applegate	Tunnel No. 29 ... Overhead
138.7	E. of N. E. Mills	Tunnel No. 30 ... Overhead
139.2	E. of Lander	Tunnel No. 31 ... Overhead
139.4	E. of Lander	Tunnel No. 32 ... Overhead
141.7	Colfax	Automatic Signal Nos. 1420, 1421 & 1425 Side
141.7	Colfax	Water Col. W. of Station W. B ... Side
144.5	E. of Colfax	Tunnel No. 33 ... Side & Overhead
144.7	E. of Colfax	Tunnel No. 34 ... Side & Overhead
	SACRAMENTO-SPARKS—EASTWARD—Concluded.	
152.2	Gold Run	Mail Crane ... Side
	Gold Run	Water Tank West end of Yard ... Side
152.4	E. of Gold Run	Oil & Water columns ... Side
208.0	Truckee	Roundhouse portals ... Side
208.0	Truckee	Oil sump doorways ... Side
215.0	Prosser Creek	Ice House ... Side
215.0	Prosser Creek	Support post for ice conveyor ... Side
216.3	Boca	Ice House No. 7 ... Side
216.3	Boca	Support post for ice conveyor ... Side
232.4	Verdi	Box factory platform ... Side
242.9	Reno	Transfer track ... Side
242.9	Reno	Buffalo Brewing Co. platform ... Side
	COLFAX-ROCKLIN—WESTWARD	
132.7	W. of Applegate	Tunnel No. 0 ... Side & Overhead
124.5	Auburn	Ford & Son Warehouse, hill track ... Side
124.5	Auburn	Lowell Warehouse, hill track ... Side
124.5	Auburn	Fruit House Track, hill track ... Side
124.5	Auburn	Hse. Track, Auburn I. & C. siding ... Side
124.5	Auburn	Hse. Track, Ford & Son, Whse. siding ... Side
123	W. of Flint	Cut ... Side
122	W. of Flint	Cut West of 122 ... Side
	W. of Flint	Cut West of 122-G ... Side
	W. of Flint	Cut West of 122-H ... Side
	W. of Flint	Bloomer Cut ... Side
113.9	Loomis	No. 1 Hill track, Earl Fruit Co ... Side
113.9	Loomis	No. 1 Hill track, Law Bros., Fruit Hse ... Side
	ROSEVILLE-GERBER	
140.8	Marysville	W. T. Ellis Warehouse ... Side
140.8	Marysville	Stock Corral Fence ... Side
140.8	Marysville	Buckeye Mill platform ... Side
140.8	Marysville	Marysville Ice & C.S.Co. platform ... Side
122.0	Marysville, E Street	Yuba Construction Co., platform ... Side
161.4	Biggs	Water Tank ... Side
161.4	Biggs	Doty Warehouse ... Side
	CHICO-STIRLING CITY	
199.6	Ostrander	Cattle Guard ... Side
206.2	Appleton	Station platform ... Side
	WOODLAND-TEHAMA	
89.2	Elvaton	De Pue Gravel Hoist ... Side & Overhead
103.2	Dunnigan	Water Tank ... Side
117.6	Genevra	Water Tank ... Side
124.2	Williams	Bartlett Water Co., shed platform ... Side
124.2	Williams	Stoval-Wilcox Wholesale platform ... Side & Overhead
124.2	Williams	Williams Warehouse Co., platform ... Side
129.1	Cortena	Colusa & Lake Freight House platform ... Side
133.0	Maxwell	Water Tank ... Side
	WYO-HARRINGTON	
150.4	Codora	Warehouse ... Side
165.9	Rotavele	Elevator ... Side
177.4	Hamilton	Boiler House of sugar factory ... Side
177.4	Hamilton	Shed over beet unloading track ... Overhead
	DAVIS-OROVILLE	
80.7	Merritt	Freight house platform siding ... Side
107.5	Marcuse	Warehouse platform, siding ... Side
111.4	Tudor	Freight house platform siding ... Side
111.4	Tudor	Water Tank ... Side
112.4	Abbott	Earl Fruit Co. bldg. siding ... Side
120.4	Yuba City	S.N.R.R. trolley wire, E. of depot ... Overhead
135.0	Honcut	Stock corral chute ... Side
135.0	Honcut	Station platform ... Side
135.0	Honcut	Brown's Warehouse ... Side
147.9	Oroville	C. L. Bills cement warehouse ... Side
147.9	Oroville	Olive Produce Co. porch ... Side
147.9	Oroville	Ice House platform ... Side
	SACRAMENTO-PLACERVILLE	
91.5	Sacramento, 23rd & R	Contractors' spur, building ... Side
95.9	Perkins	Perkins' Store ... Side
98.9	Mayhew	Humphrey Packing house platform ... Side
98.9	Mayhew	Earl Fruit Co. platform ... Side
122.3	Cothrin	Rock Cut ... Side
126.4	Latrobe	Rock Cut ... Side
126.5	E. of Latrobe	Rock Cut ... Side
128.6	E. of Latrobe	Rock Cut ... Side
148.7	Placerville	Water Tank ... Side
	SACRAMENTO-WALNUT GROVE	
93.0	Charles	Stock Chutes at 93-A ... Side
113.4	Walnut Grove	Pacific Fruit Bldg ... Side

RATING OF ENGINES—SACRAMENTO DIVISION—In M's.

Corrected to February, 1922.

NOMINAL CLASS	OFFICIAL CLASS	ENGINE NUMBERS	Boiler Pressure	Sacramento and Gerber via Roseville EAST and WEST	Roseville to Colfax Via Eastward Track	Colfax to Sparks Roseville to Colfax via Westward Track	Sparks to Truckee	Truckee to Summit	Davis and Gerber Davis and Marysville EAST and WEST	Placerville to Folsom	Folsom to Placerville	Folsom to Sacramento	Sacramento to Folsom
E-2	E-69 18/24 59	1373, 1375	150	2210	......	......	......	......	1850	......	......	1930	1250
E-2	E-69 18/24 61	1374, 1376 to 1381											
E-4	E-69 18/24 65	1384, 1388, 1391, 1398, 1399	160	2360	......	......	......	......	1980	......	......	2060	1340
E-5	E-69 18/24 69	1389, 1390, 1392 to 1394, 1396, 1397, 1401	165	2430	......	......	......	......	2040	......	......	2120	1370
E-1	E-73 18/24 63	1432	160	2250	......	......	......	......	1890	......	......	1970	1280
E-23	E-73 20/24 92	1445 to 1458	190	3310	......	......	......	......	2780	......	......	2890	1880
E-24	E-69 18/26 73	1459 to 1463	165	2600	......	......	......	......	2120	......	......	2270	1430
E-24	E-69 18/26 74	1464 to 1467, 1469, 1471	165	2580	......	......	......	......	2100	......	......	2250	1410
E-25	E-69 18/26 72	1470, 1472, 1477, 1478	160	2510	......	......	......	......	2050	......	......	2190	1380
E-25	E-69 18/26 69	1475	150										
M-6	M-63 21/28 150-S	1725 to 1769, 1780 to 1803 (Superheated)	200	5260	1450	800	2150	930	4160	1550	990	4610	2840
M-6	M-63 21/28 144	1725 to 1769, 1780 to 1803 (Saturated)	195	4880	1330	730	1980	850	3860	1430	910	4270	2620
M-6	M-63 21/28 153-S	1823 to 1825	200	5250	1440	790	2140	920	4150	1540	980	4600	2830
M-9	M-63 21/28 156-S	1826, 1827	210	5540	1530	840	2270	980	4390	1490	1050	4850	2990
T-16	T-63 18/24 75	2014	140	2200	......	......	......	......	1800	......	......	1920	1210
T-10	T-57 18/24 86	2134 to 2152	160	2780	......	......	......	......	2220	......	......	2430	1500
T-8	T-57 18/24 87	2174, 2176 to 2179, 2181 to 2183	160										
T-2	T-63 19/24 105	2221 to 2234	160	2830	......	......	......	......	2310	......	......	2470	1560
T-1	T-63 20/26 112	2235 to 2273	180	3840	1030	560	1560	660	3080	1110	700	3360	2090
T-25	T-69 20/28 134	2274 to 2281	200	4220	1090	560	1690	680	3430	1180	720	3690	2320
T-26	T-69 21/28 152-S	2283 to 2300 (Superheated)	200	4800	1270	680	1950	810	3900	1380	860	4230	2680
T-26	T-69 21/28 149	2283 to 2300 (Saturated)	200	4680	1230	650	1890	780	3810	1340	830	4090	2590
T-23	T-63 21/28 144-S	2301 to 2308, 2310 (Superheated)	210	5550	1540	850	2280	990	4400	1650	1060	4860	3000
T-23	T-63 21/28 144	2301 to 2308, 2310 (Saturated)	200	4910	1360	740	1990	870	3950	1460	930	4380	2690
T-28	T-63 22/28 162-S	2311 to 2352 (Superheated)	210	6060	1670	920	2480	1080	4800	1800	1150	5310	3270
T-28	T-63 22/28 160	2311 to 2352 (Saturated)	200	5480	1490	810	2230	960	4340	1610	1020	4800	2950
T-32	T-69 23/28 174-S	2363 to 2370	200	5840	1560	850	2380	1010	4760	1690	1060	5120	3250
T-32	T-69 23/28 174-S	2371 to 2378	210	6170	1660	910	2520	1080	5040	1800	1140	5400	3440
C-11	C-51 22/26 152	2502	180	5170	1450	810	2120	940	4050	1550	1000	4490	2770
C-12	C-50 20/28 164	2503	180	4520	1220	650	1820	770	3520	1310	820	3950	2390
C-9, C-10	C-57 22/30 194-S	2513 to 2599, 2752 to 2857 (Superheated)	210	6660	1860	1030	2730	1200	5220	1980	1280	5790	3560
C-8	C-57 22/30 192-S	2698 to 2751 (Superheated)											
C-9, C-10	C-57 22/30 187	2513 to 2599, 2752 to 2857 (Saturated)	200	5930	1630	890	2410	1040	4640	1750	1110	5140	3150
C-8	C-57 22/30 184	2698 to 2751 (Saturated)											
C-4	C-57 22/34 176-S	2612 to 2623 (Superheated)	190	5990	1670	930	2450	1080	4680	1780	1150	5010	3200
C-4	C-57 22/34 176	2612 to 2623 (Saturated)	185	5750	1600	880	2350	1020	4490	1700	1090	4800	3060
C-2	C-57 22/34 172	2600 to 2611 (Saturated)	185	5750	1600	880	2350	1020	4490	1700	1090	4800	3060
C-2	C-57 22/34 1805	2600 to 2611 (Superheated)	190	6280	1760	980	2570	1130	4910	1870	1210	5250	3350
C-5	C-57 22/30 187-S	2624 to 2679 (Superheated)	210	6690	1890	1060	2760	1230	5250	2010	1310	5820	3590
C-5	C-57 22/30 185-S	2680 to 2693 (Superheated)											
C-5	C-57 22/30 180	2624 to 2679 (Saturated)	200	5960	1660	920	2440	1070	4660	1770	1140	5170	3180
C-5	C-57 22/30 178	2680 to 2693 (Saturated)											
TW-1	TW-54 22/26 147	2904 to 2913	180	5070	1390	760	2060	890	3960	1490	950	4450	2690
TW-4	TW-50 20/30 120	2928, 2930, 2931	160	3920	1080	600	1600	690	3070	1160	740	3430	2090
MK-4	MK-57 $23\frac{3}{4}/30$ 206-S	3216 to 3236 (Superheated)	200	7400	2070	1150	3030	1330	5760	2210	1430	6480	3920
MK-5, MK-6	MK-63 26/28 210-S	3237 to 3271	200	8000	2240	1240	3310	1450	6400	2400	1540	7070	4380
MC-2	MC-57 $\frac{26-40}{30}$ 394	4002 to 4016 (Saturated)	200	8000	3815	2170	5460	2500	......	......	......	......	......
MC-4	MC-57 $\frac{26-40}{30}$ 398	4017 to 4028 (Saturated)											
MC-6	MC-57 $\frac{26-40}{30}$ 401-S	4029 to 4048 (Superheated)											
MM-2	MM-63 $\frac{25-38}{28}$ 320	4200 to 4211 (Saturated)	200	8000	3185	1795	4660	2070	......	......	......	......	......
F-1	F-63 $\frac{27\frac{1}{2}}{32\frac{1}{2}}$ 273-S	3600 to 3652 (Superheated)	200	8000	2730	1520	3990	1760	......	......	......	......	......
P-1, P-3	P-77 22/28 141–S	2400 to 2437, 2459, 2460 (Superheated)	210	4980	1270	660	1970	800	4080	1390	840	4350	2780
F-3	F-63 $29\frac{1}{2}/3^{2}$ 297–S	3653 to 3667	200	8000	3110	1730	4560	2010	......	......	......	......	......
E-5	E-69 18/24 69	1383-1386-1387-1389-1390-1392 1394-1396-1397-1401	165	2430	......	......	......	......	2040	......	......	2120	1370
E-8	E-69 18/28 75	1421	170	2900	......	......	......	......	2350	......	......	2530	1590
M-4	M-63 20/28 126	1615 to 1719 (Saturated)	190	4280	1160	620	1730	730	3380	1240	780	3740	2300
Allowance for Empty and under-loaded Cars		Less than 40 M's		6	6	3	3	3	6	3	3	6	6
		40 to 50 M's		3	3	0	0	0	3	0	0	3	3
		More than 50M's		0	0	0	0	0	0	0	0	0	0

MILEAGE
Main Lines

-			East Ward	West Ward
End of Western Division to East Bank Sacramento River	E. W.	S. P. R. R.	.293	....
East Bank of Sacramento River to Sacramento	E. W.	C. P. Ry.	.135	....
Sacramento to End of Division at Lawton	E. W.	C. P. Ry.	148.847	....
End Western Division to East Bank Sacramento River.	W. W.	S. P. R. R.	....	.293
Sacramento to B. C. Junction	W. W.	C. P. Ry.	....	76.773
Truckee to End of Sacramento Division at Lawton	W. W.	C. P. Ry.	....	30.893
Sacramento to "K" Street	....	C. P. Ry.	.383	....
"K" Street to "N" Street	....	S. P. R. R.	.245	....
"N" Street to "Q" Street Junction Sacramento	....	C. P. Ry.	.193	....
"Q" Street Junction to Brighton	....	S. P. R. R.	4.941	....
Brighton to End of Sacramento Division	....	C. P. Ry.	1.191	....
Brighton to Elvas—East Leg of Wye	E. W.	C. P. Ry.	3.262	....
Elvas, West Leg of Wye Towards Sacramento	E. W.	C. P. Ry.	.308	....
Brighton to Elvas—East Wye	W. W.	C. P. Ry.	....	3.223
Elvas—West Wye—Towards Brighton	W. W.	C. P. Ry.	....	.314
Davis to Tehama	....	S. P. R. R.	110.401	....
Northern Junction to Binney Junction	....	S. P. R. R.	36.018	....
	....	S. P. Co.	1.198	....
Roseville to End of Sacramento Division near Gerber...		C. P. Ry.	105.916	....
Westward	111.496			
Eastward	413.251			
Total	524.747		413.251	111.496

MILEAGE
Branch Lines

Fair Oaks	Citrus to Fair Oaks	S. P. R. R.	2.140
Folsom Junction to Folsom		S. P. R. R.	.995
Placerville	Brighton to Placerville	S. P. R. R.	55.073
Walnut Grove	"Q" St. Jct., Sacramento to Walnut Grove	C. P. Ry.	24.148
Howard	Peart to Howard	S. P. R. R.	1.880
Jct. Switch near Marchant to Karnak		S. P. R. R.	2.749
Sutter Basin	Grace to Sheffield	S. P. R. R.	15.293
Colusa	Harrington to Wyo	S. P. R. R.	71.655
Fruto	Willows to Fruto	S. P. R. R.	17.204
Oroville	Binney Jct., to Oroville	S .P. R. R.	25.267
Stirling City	Chico to Stirling City	C. P. Ry.	31.216
Total Branch		....	247.620

Total Eastward	413.251
Total Westward	111.496
Total Branch	247.620
Total Sacramento Division	772.367

TRAINMASTERS.

C. C. FISHER	SACRAMENTO, CAL.
W. B. KIRKLAND	SACRAMENTO, CAL.
M. L. JENNINGS	SACRAMENTO, CAL.
J. LORD	TRUCKEE, CAL.
J. B. KNAPP, Assistant Train Master	BLUE CANON, CAL.

CHIEF TRAIN DISPATCHERS.

O. T. STACKPOOLE	SACRAMENTO, CAL.
D. A. NEELLEY	SACRAMENTO, CAL.

ROAD FOREMEN OF ENGINES.

C. A. FOGUS	ROSEVILLE, CAL.
J. STURM	SACRAMENTO, CAL

T. AHERN,
Superintendent.

W. M. STILLMAN,
Assistant Superintendent.

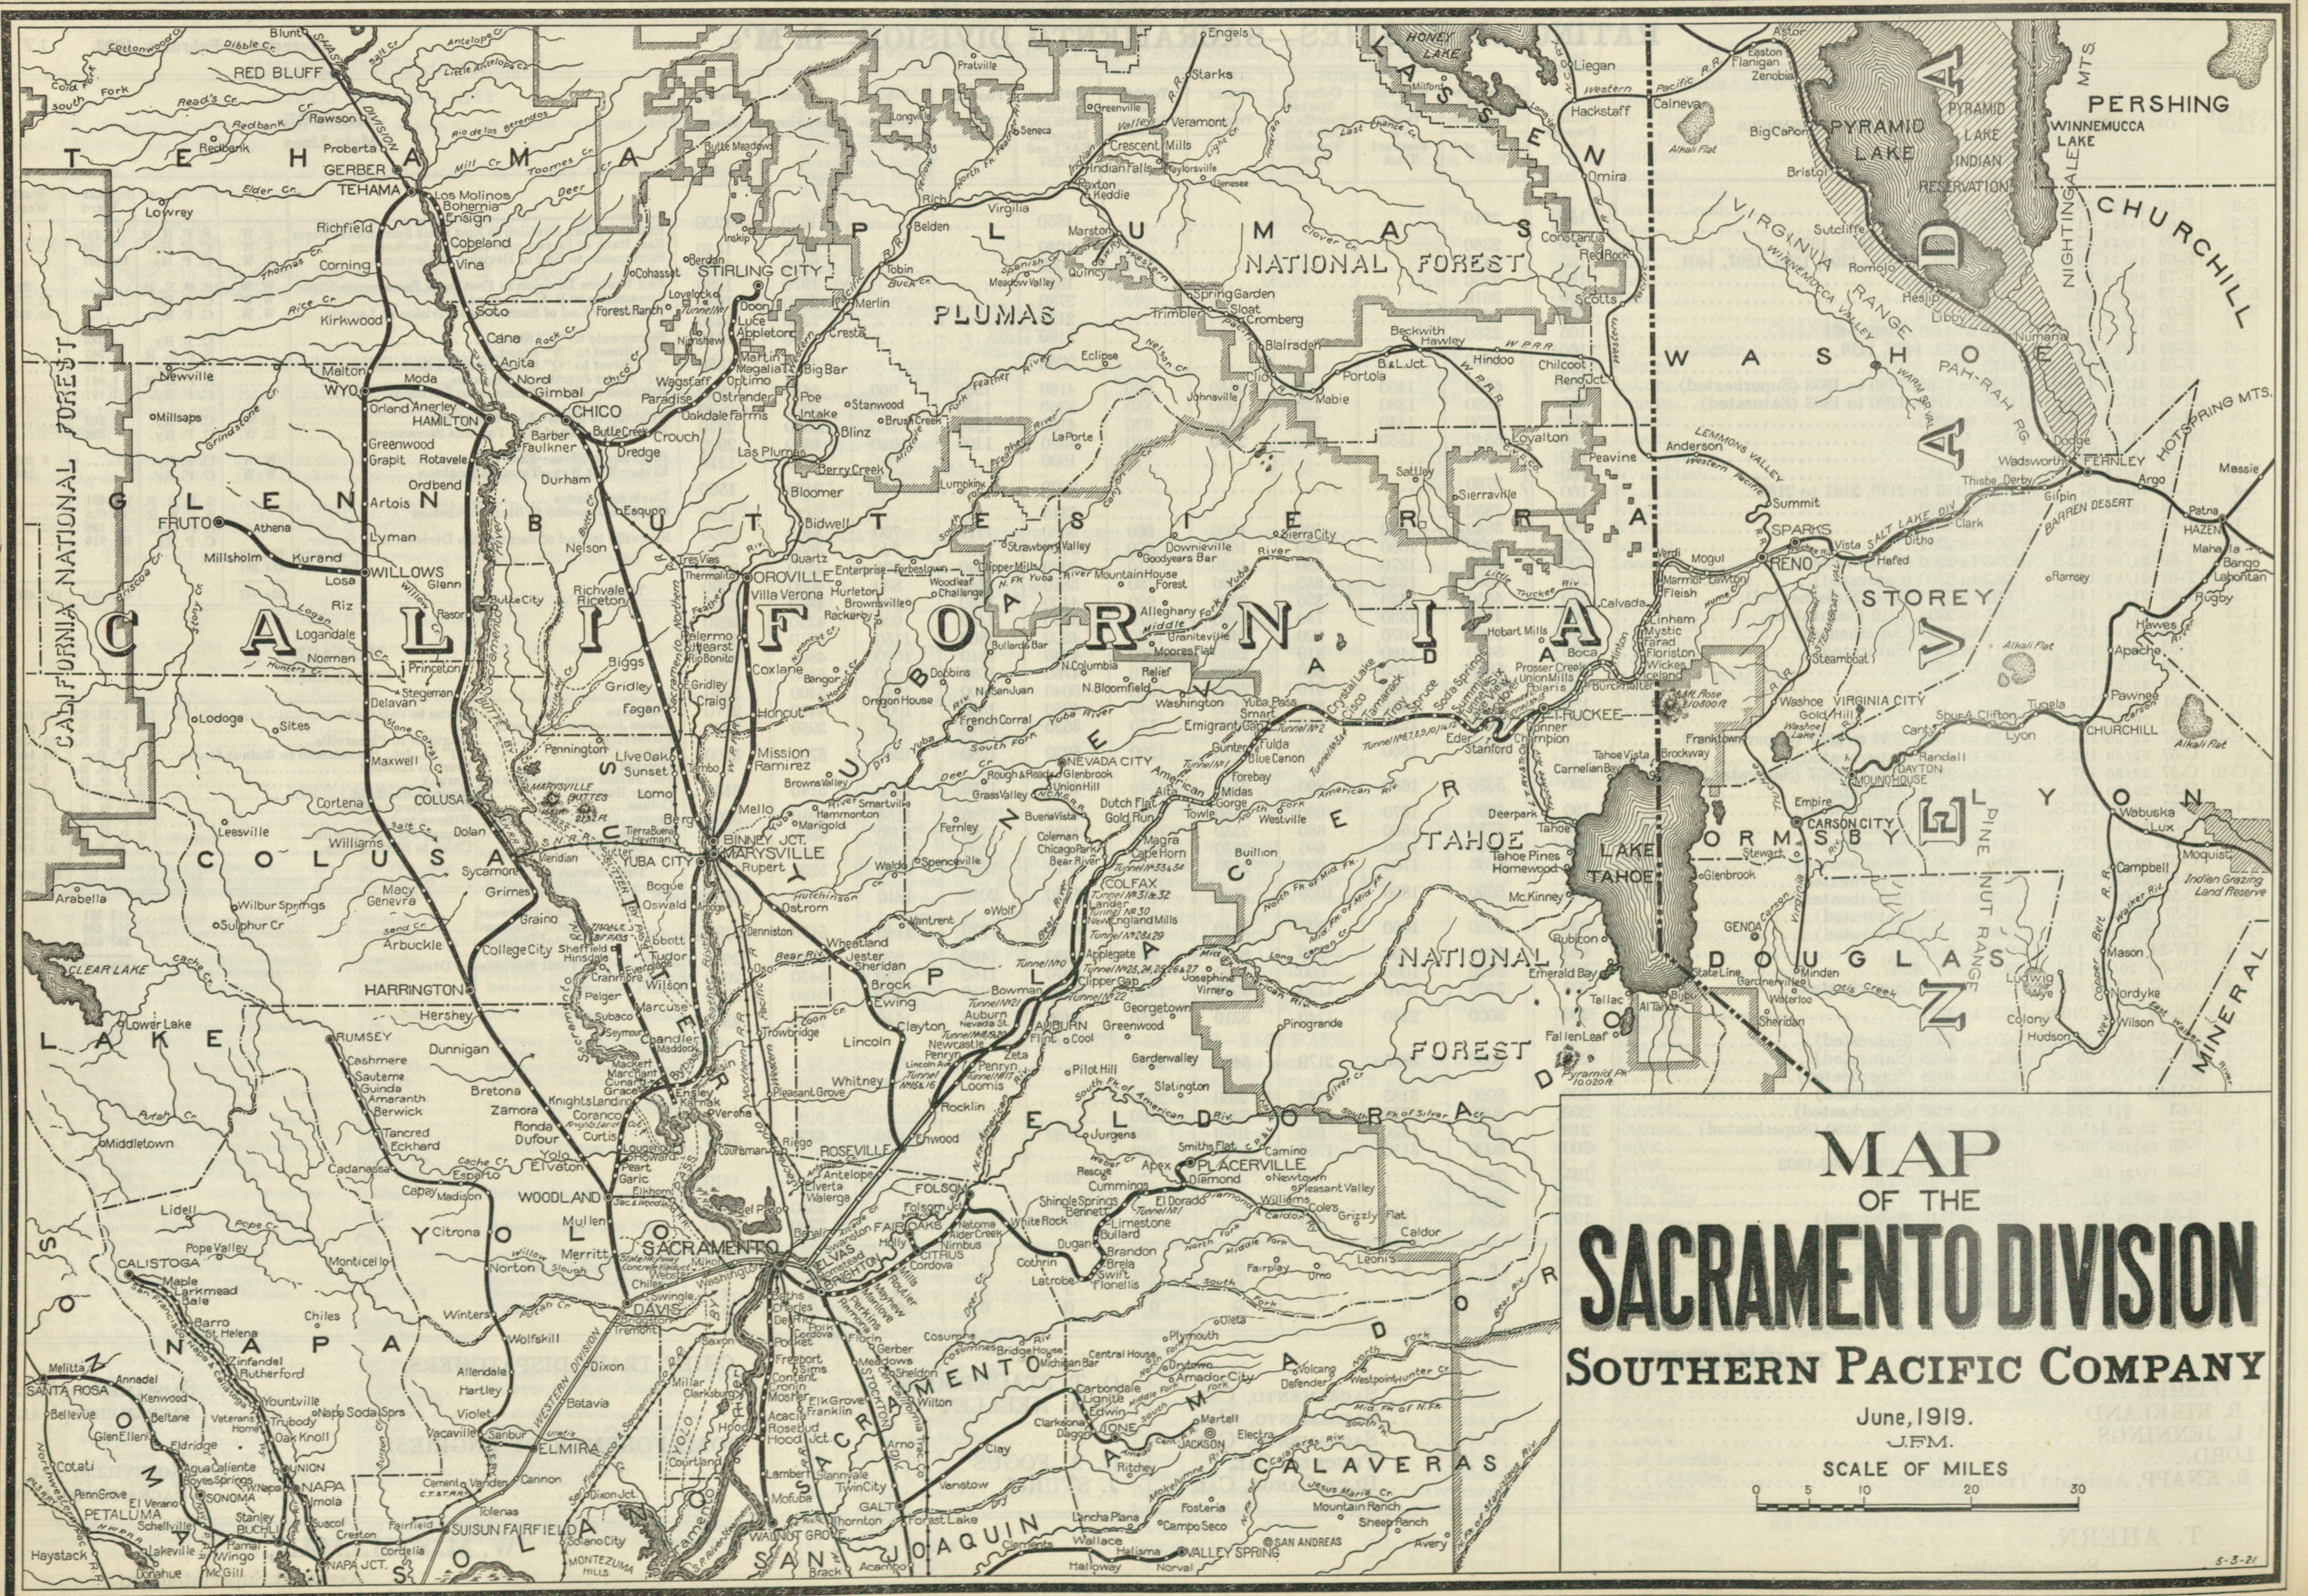
TEHAMA
GLENN
BUTTE
PLUMAS
LASSEN
SIERRA
NEVADA
YUBA
SUTTER
COLUSA
LAKE
YOLO
NAPA
SONOMA
SOLANO
SACRAMENTO
SAN JOAQUIN
AMADOR
CALAVERAS
EL DORADO
PLACER
CALIFORNIA
CALIFORNIA NATIONAL FOREST
PLUMAS NATIONAL FOREST
TAHOE NATIONAL FOREST
ELDORADO NATIONAL FOREST
NEVADA
WASHOE
STOREY
ORMSBY
DOUGLAS
LYON
CHURCHILL
PERSHING
MINERAL
PYRAMID LAKE
WINNEMUCCA LAKE
PYRAMID LAKE INDIAN RESERVATION
LAKE TAHOE
CLEAR LAKE
HONEY LAKE
VIRGINIA RANGE
PAH-RAH RG.
PINE NUT RANGE
HOTSPRING MTS.
NIGHTINGALE MTS.
BARREN DESERT
RED BLUFF
GERBER
TEHAMA
CHICO
OROVILLE
WILLOWS
COLUSA
MARYSVILLE
YUBA CITY
BINNEY JCT.
HARRINGTON
WOODLAND
DAVIS
SACRAMENTO
ROSEVILLE
AUBURN
COLFAX
NEVADA CITY
FOLSOM
PLACERVILLE
TRUCKEE
RENO
SPARKS
CARSON CITY
VIRGINIA CITY
FERNLEY
HAZEN
CHURCHILL
STIRLING CITY
HAMILTON
FRUTO
RUMSEY
CALISTOGA
NAPA
NAPA JCT.
SANTA ROSA
PETALUMA
SONOMA
ELMIRA
SUISUN FAIRFIELD
GALT
IONE
VALLEY SPRING
WESTERN DIVISION
SHASTA DIVISION
SALT LAKE DIV.
Western Pacific R.R.
5-3-21

MAP
OF THE
SACRAMENTO DIVISION
SOUTHERN PACIFIC COMPANY

June, 1919.

J.F.M.

SCALE OF MILES

0 5 10 20 30